

 
WNST-1 & WNST-2

Single & Dual | Installation Instructions

STEP 1 COLUMN	Page 3
STEP 2 MOUNT	Page 4
STEP 3 WORK SURFACE	Page 5
STEP 4 BEAM	Page 6
STEP 5 MONITOR TILTER	Page 7
STEP 6 MONITOR CUPS	Page 8
STEP 7 CABLE MANAGEMENT	Page 9

NOTE: Depending on your Winston Workstation® configuration, you may not receive all the parts shown within this instruction booklet.


 


 



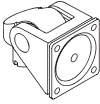




 
 

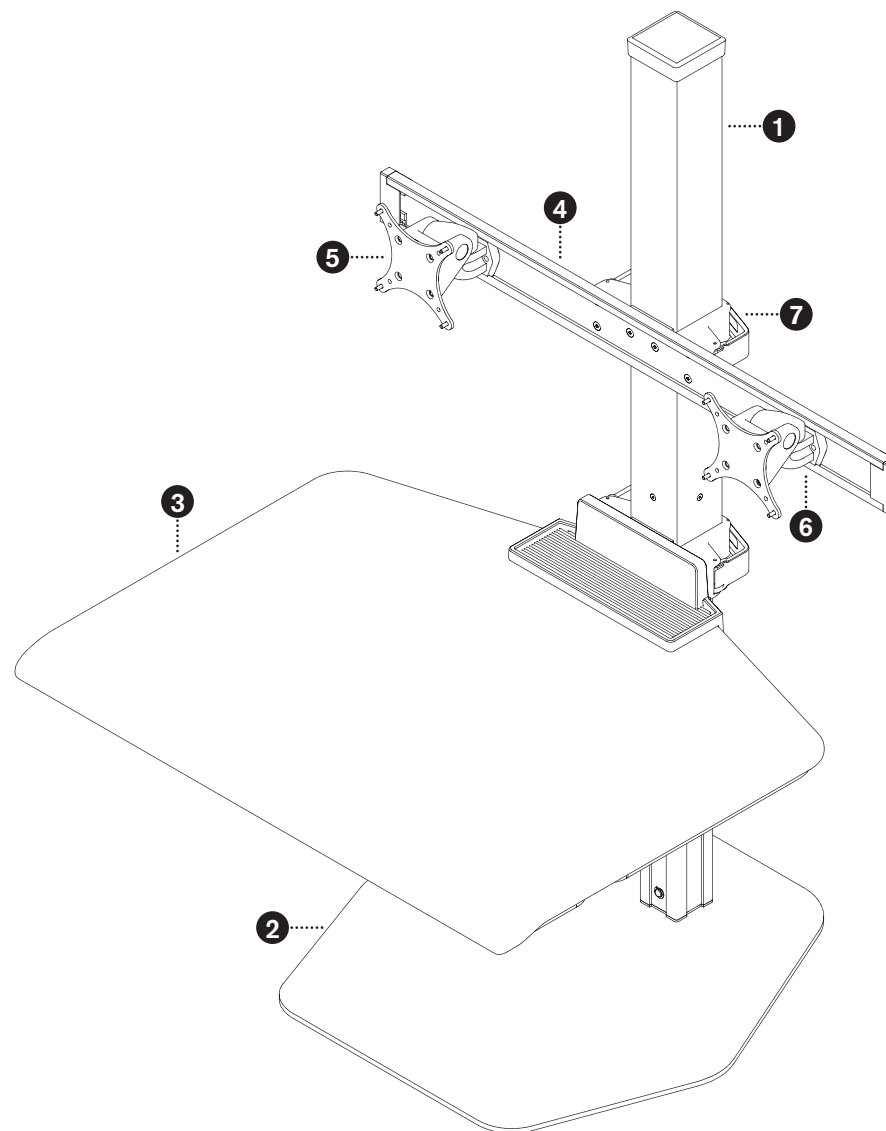

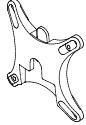

 





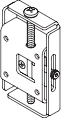
Installation may require two people.



Depending on your Winston Workstation® configuration, **you may not receive all parts** shown below.

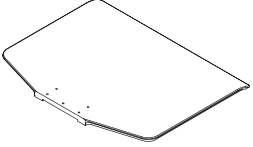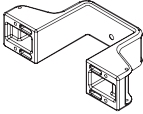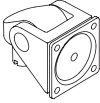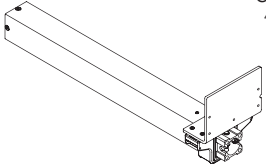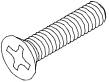WNST-1 & WNST-2

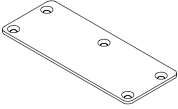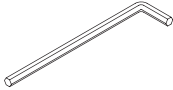

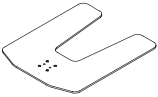
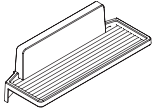
Winston Workstation® Single & Dual | Parts List
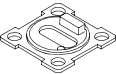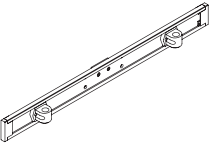
<p>A Work Surface 111435</p> 	<p>G 3/8-16 x 1" FHSCS 701124</p> 	<p>M Column Clamp 111040</p> 	<p>S Standard Monitor Tilter 405397</p> 	<p>Y Dog Washer 111230-603</p> 
<p>B Column 411470</p> 	<p>H Screws 713273</p> 	<p>N 1/8" Allen Wrench 701312</p> 	<p>T HD Monitor Tilter (optional) 407747</p> 	<p>Z 10-32 x 1/2" FHSCS 711240</p> 
<p>C Felt Pad 111464</p> 	<p>I Top Plate 111736</p> 	<p>O 7/32" Allen Wrench 701127</p> 	<p>U M4 x 12mm PhPHS 702096</p> 	<p>AA Column Cable Clip 111203-708</p> 
<p>D Freestanding Base (WNST-1 only) 111731</p> 	<p>J Utility Tray 113025</p> 	<p>P Column Cap 111275-708</p> 	<p>V QR VESA Adapter (optional) 109464</p> 	
<p>E Freestanding Base (WNST-2 only) 111248</p> 	<p>K 10-32 x 1" FHSCS 711467</p> 	<p>Q 10-32 x 3/8" PhPHS 702281</p> 	<p>W QR Monitor Tilter (optional) 411019</p> 	
<p>F Cable Retainer 111735</p> 	<p>L Beam (10" or 30") 412036 or 412037</p> 	<p>R 75/100 mm VESA Adapter 105587</p> 	<p>X Fine Tune Adjust (optional) 8473</p> 	


STEP 1

COLUMN

    IMPORTANT: Do not pull excessively on cable – doing so may result in accidental actuation of column.

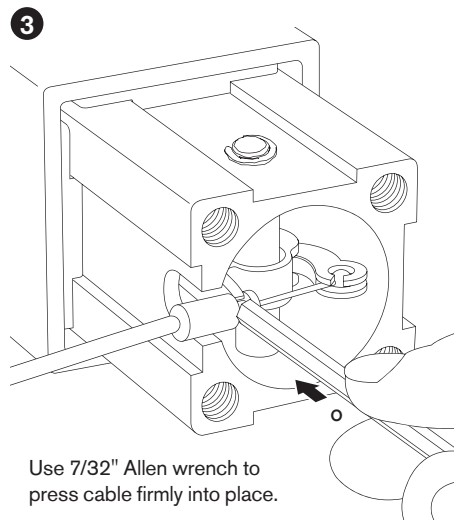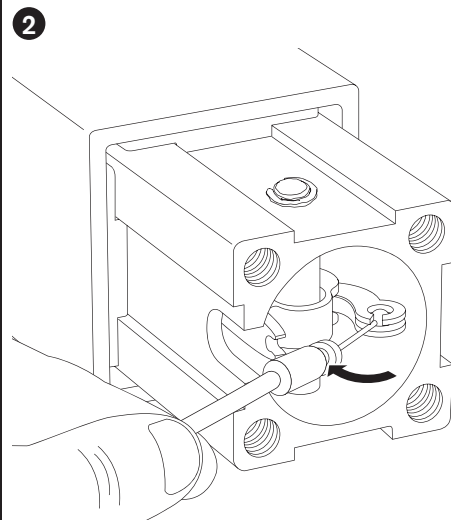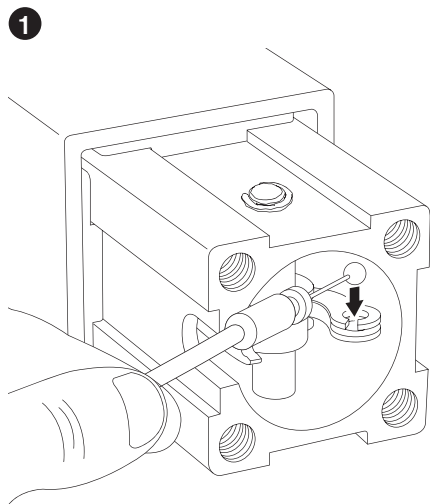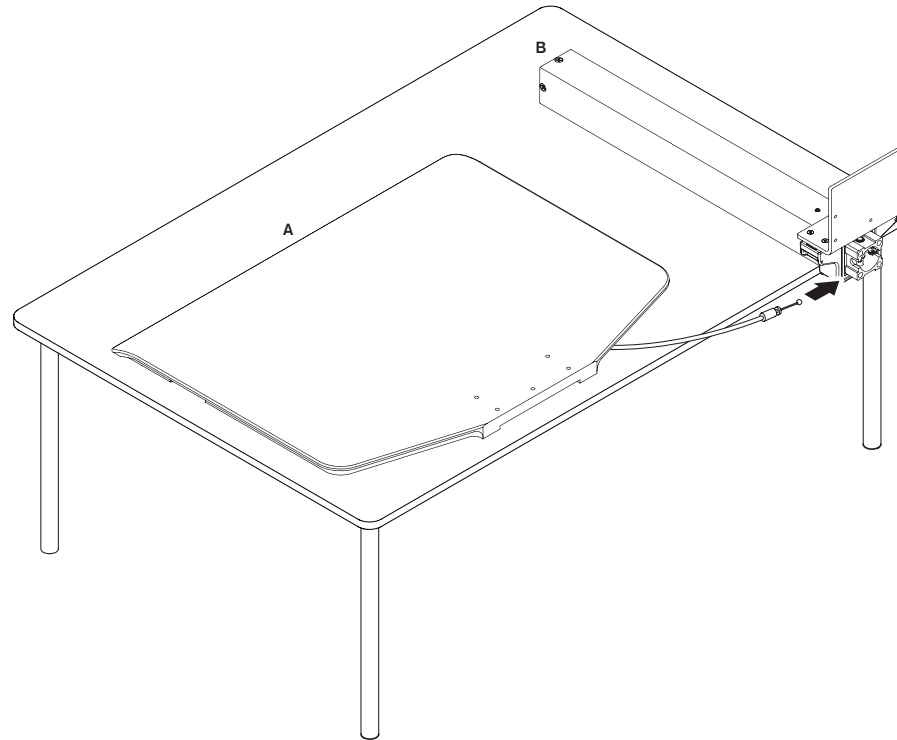

 Use 7/32" Allen wrench to press cable firmly into place.

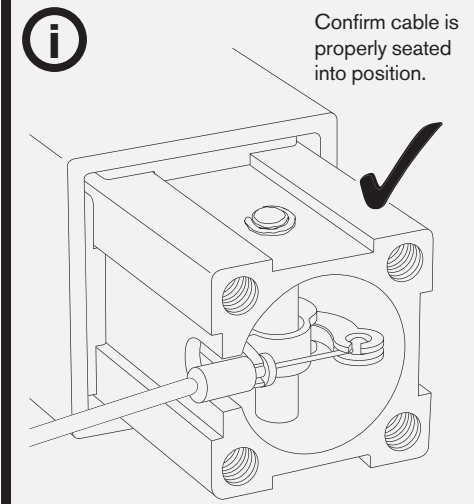


Confirm cable is properly seated into position.

STEP 2


FREESTANDING MOUNT

 1

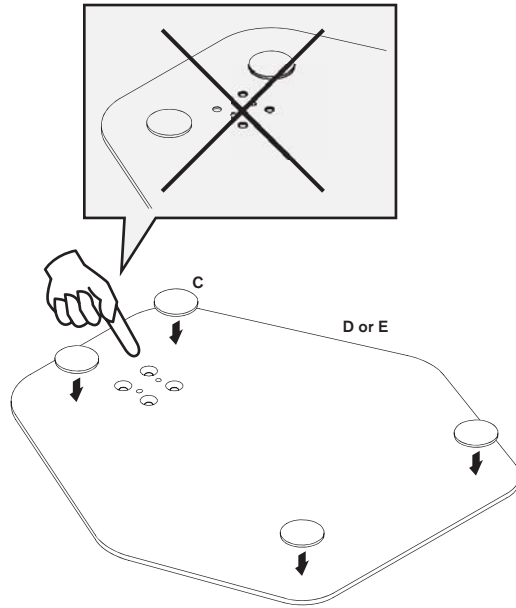


2

 Hang base plate over edge of work surface to allow access to countersunk holes. Side of base plate with felt pads should be face down.

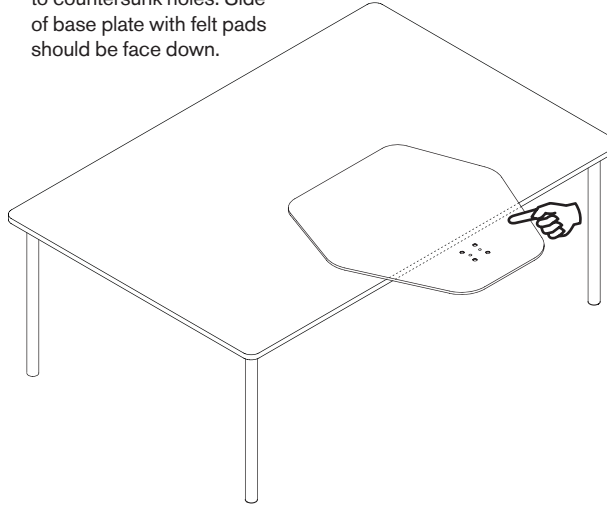


3

 
Place work surface on base plate to aid as a counterbalance.

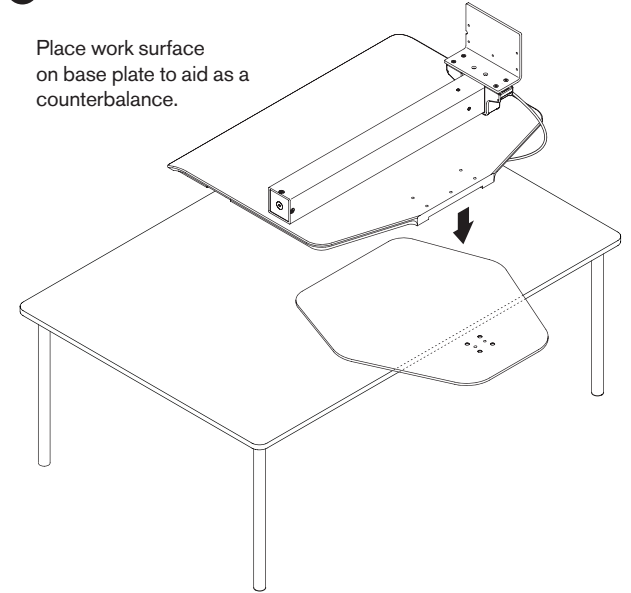

4

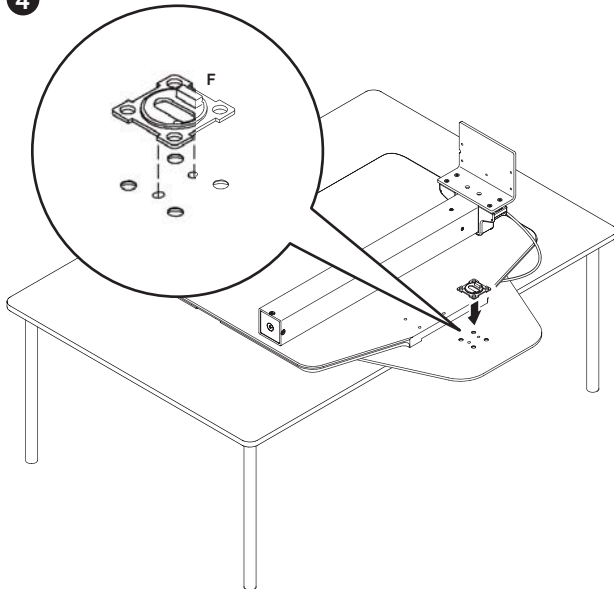 


5

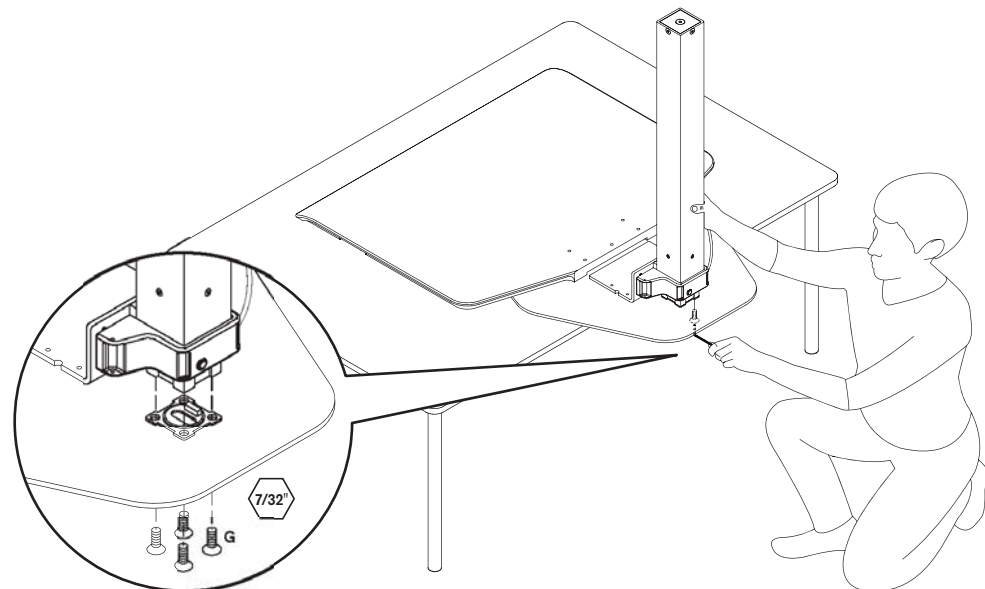 

STEP 3


WORK SURFACE

 1

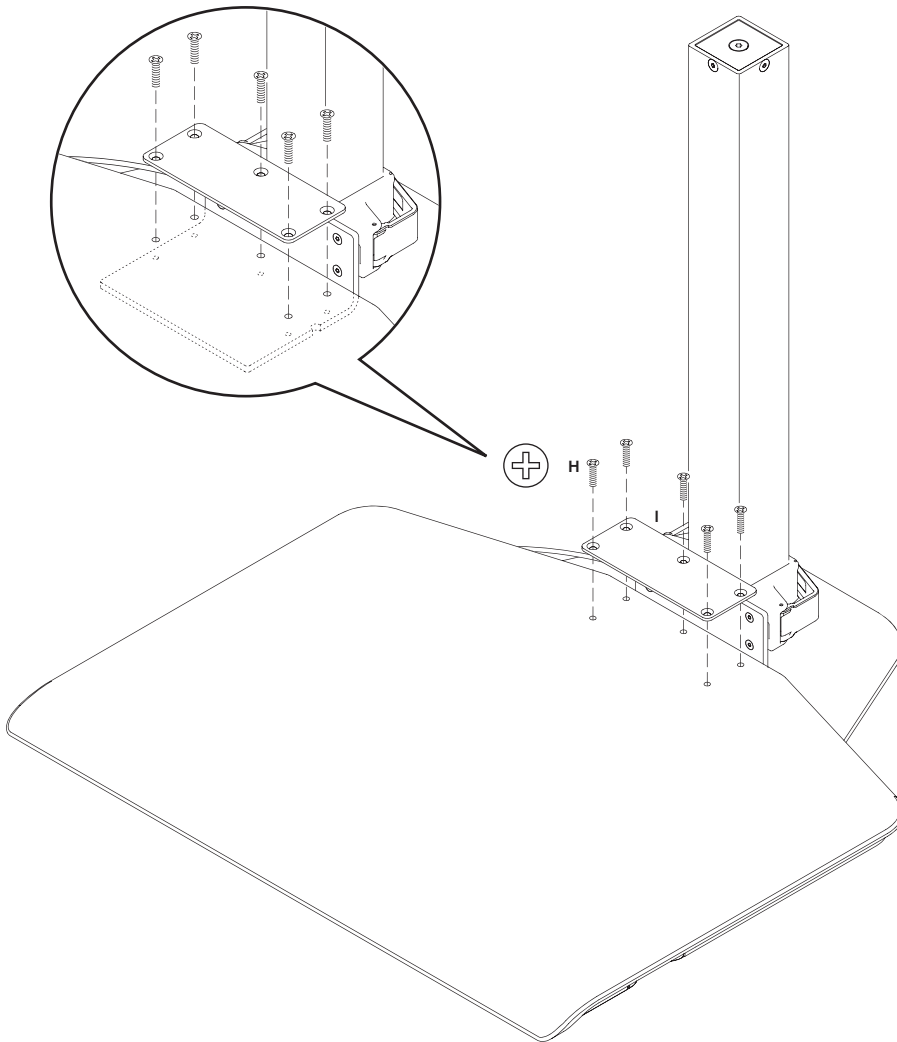

2

 
Slide utility tray onto work surface.
Utility tray simply rests on top of
work surface.

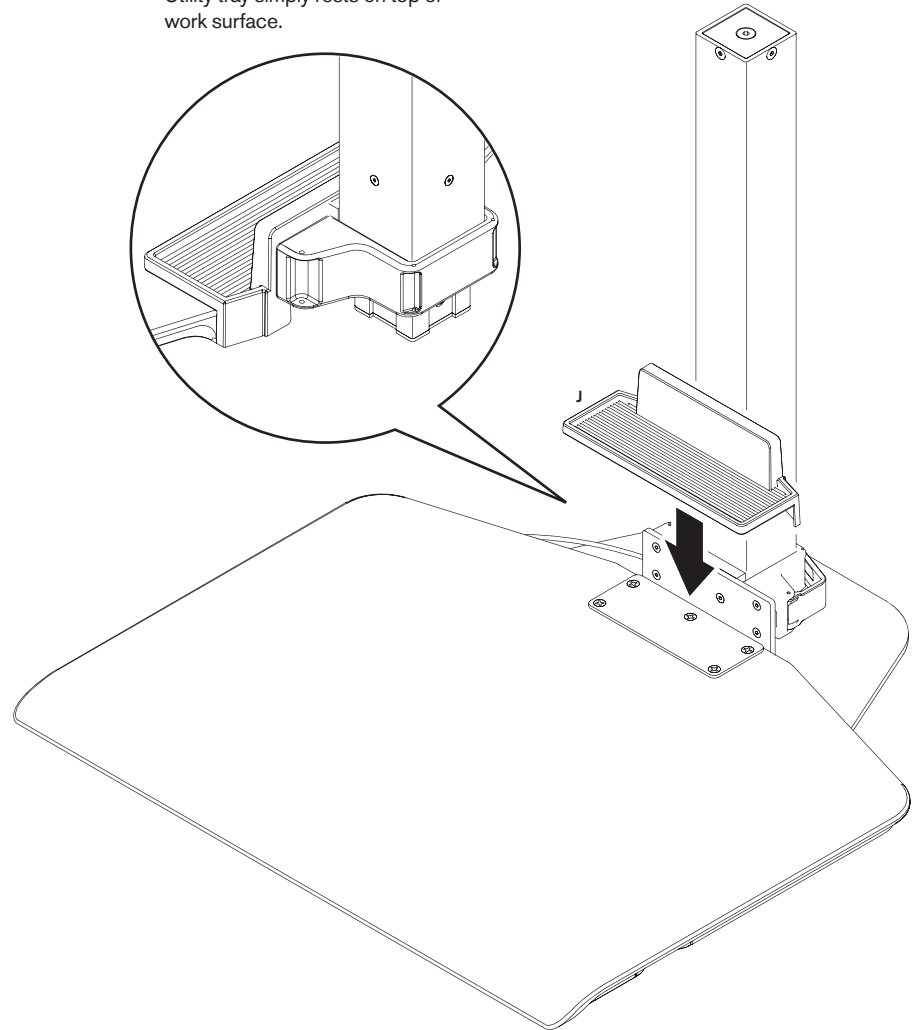


STEP 4

BEAM

 
1

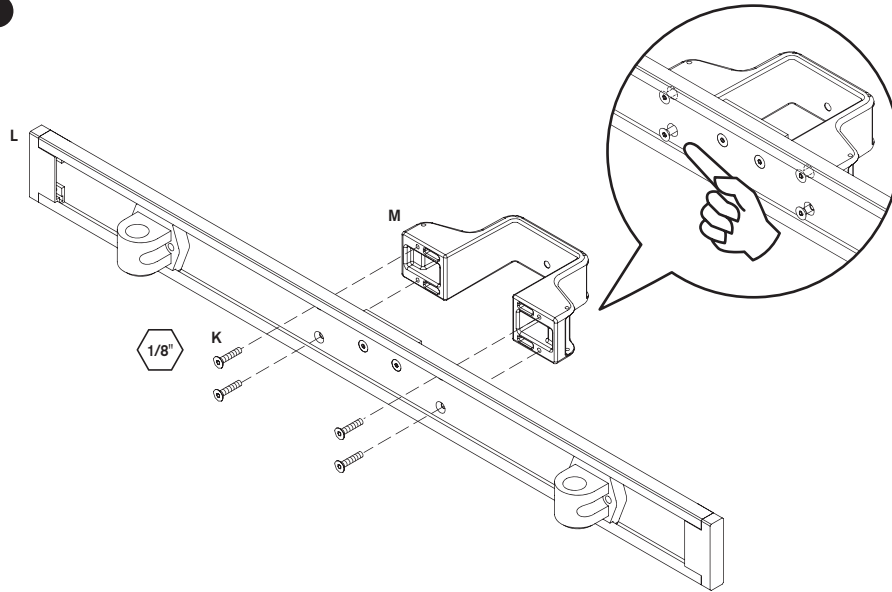

2

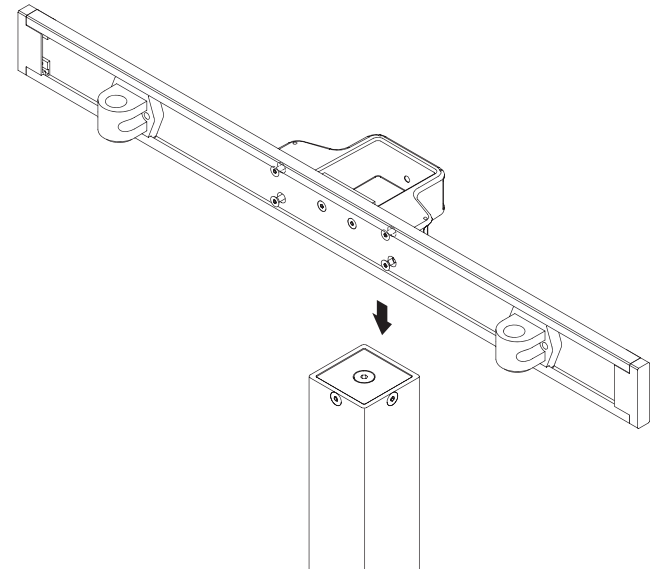 


3

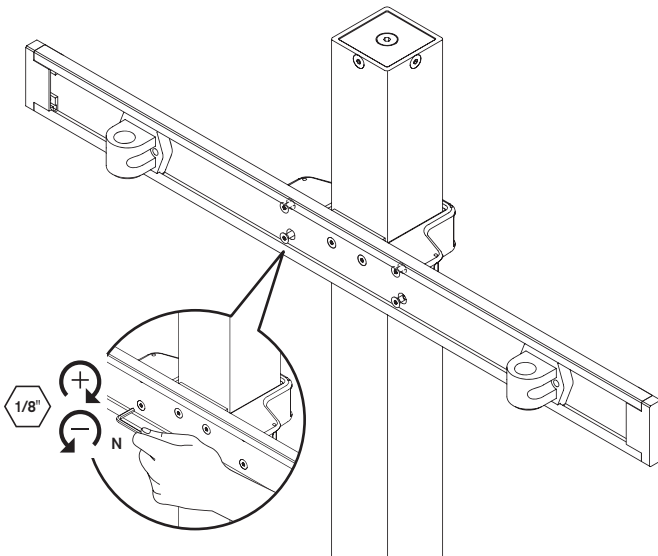 


IMPORTANT:

 Tighten bolts evenly.
 The beam should sit flush
 against the column, ensure
 there are no gaps. Also, it is
 important the work surface
 clamp is level.

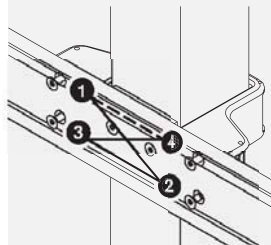


4

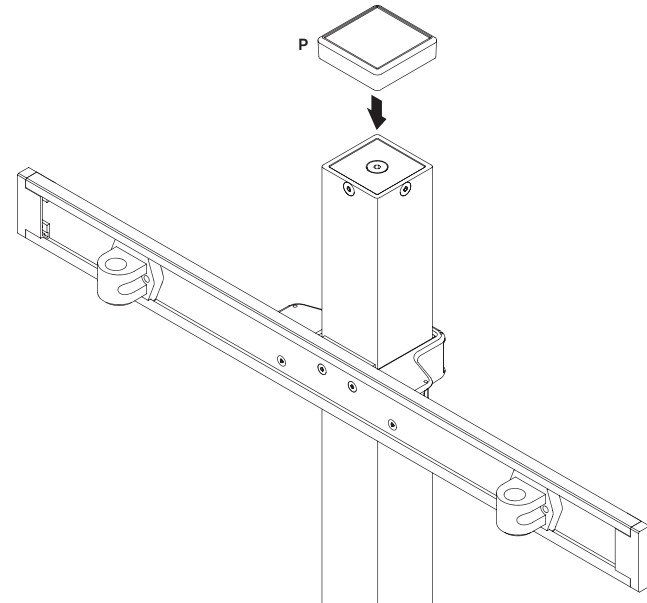 


STEP 5

MONITOR TILTER

 
STANDARD TILTER & SPRING TILTER

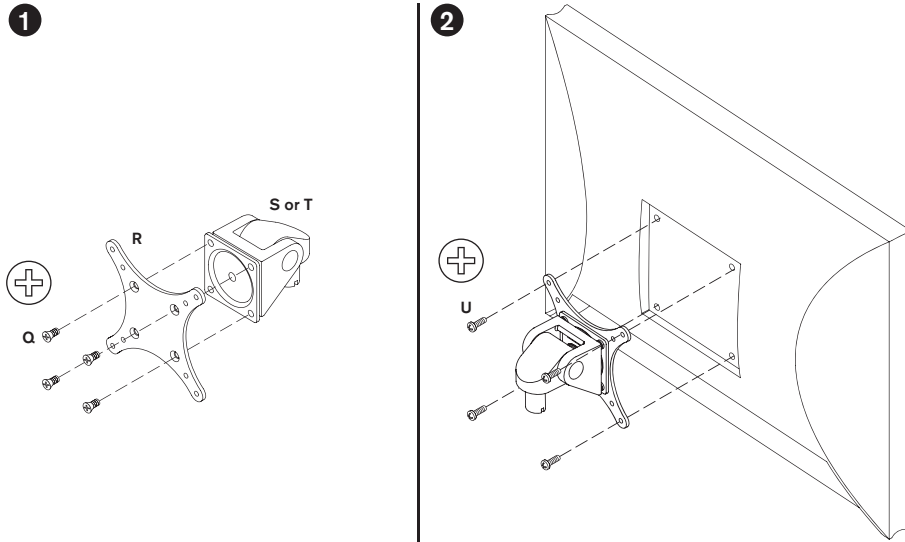

QUICK RELEASE TILTER

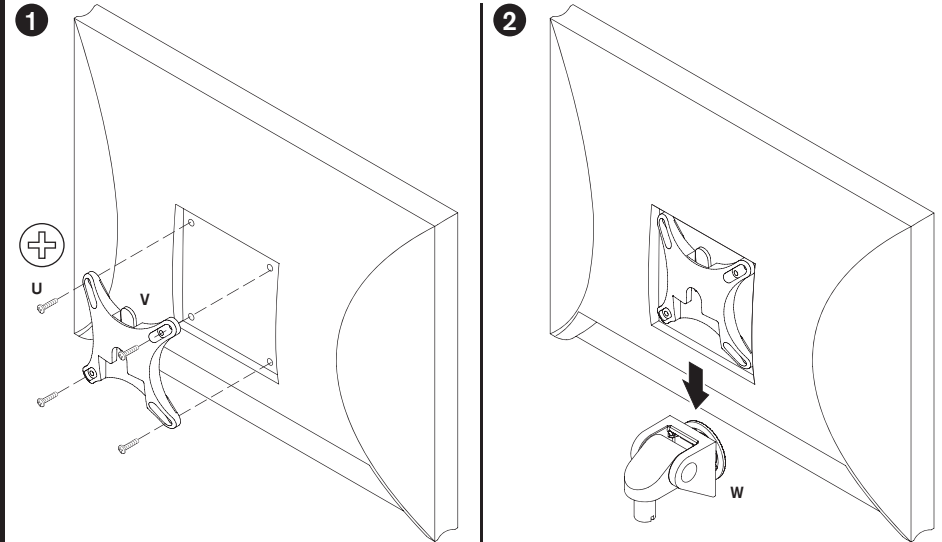 



FINE TUNE HEIGHT ADJUST TILTER

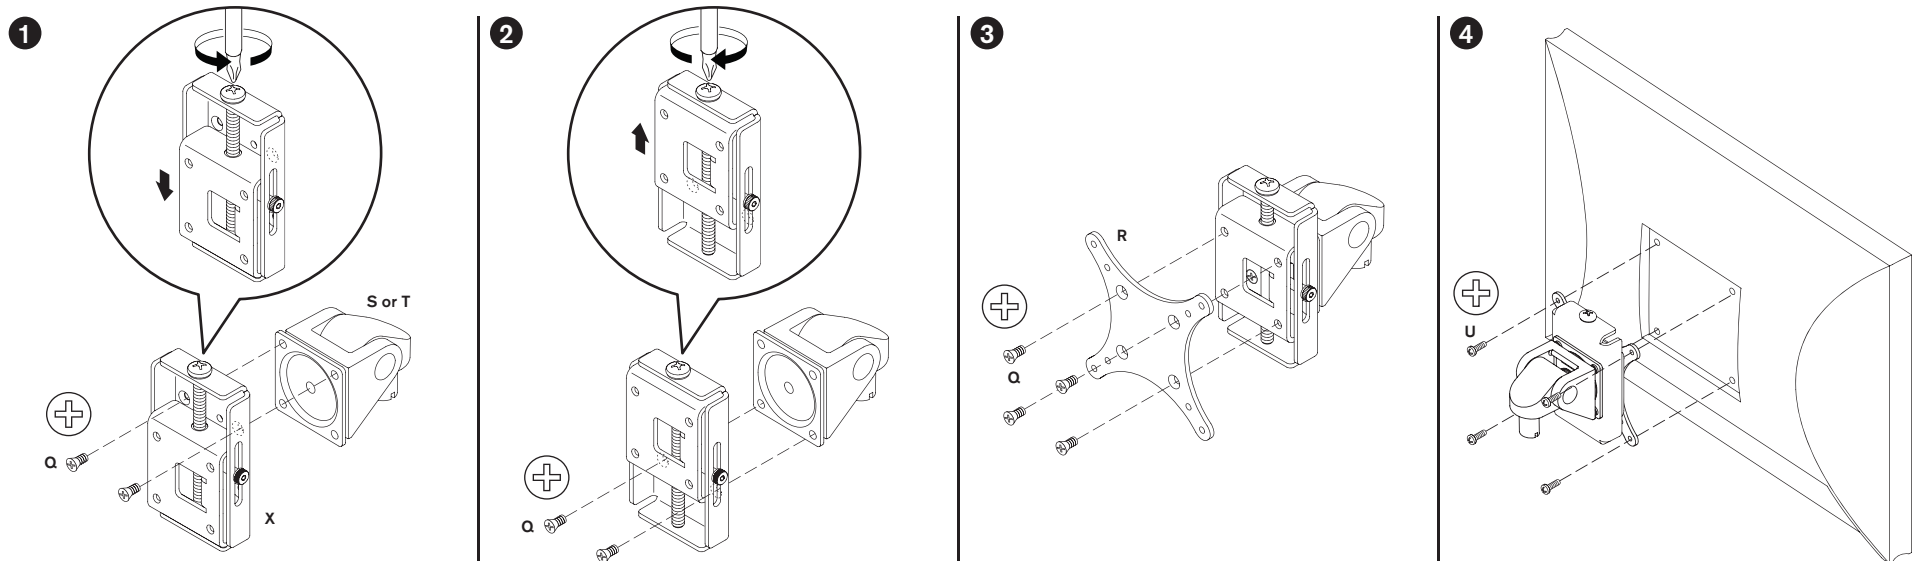 

STEP 6

MONITOR CUPS

  
1

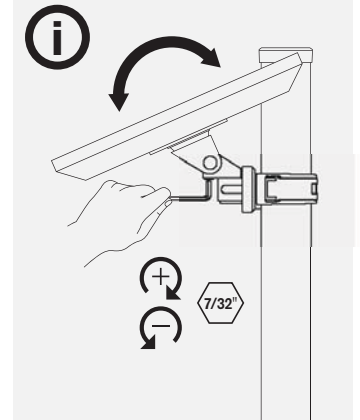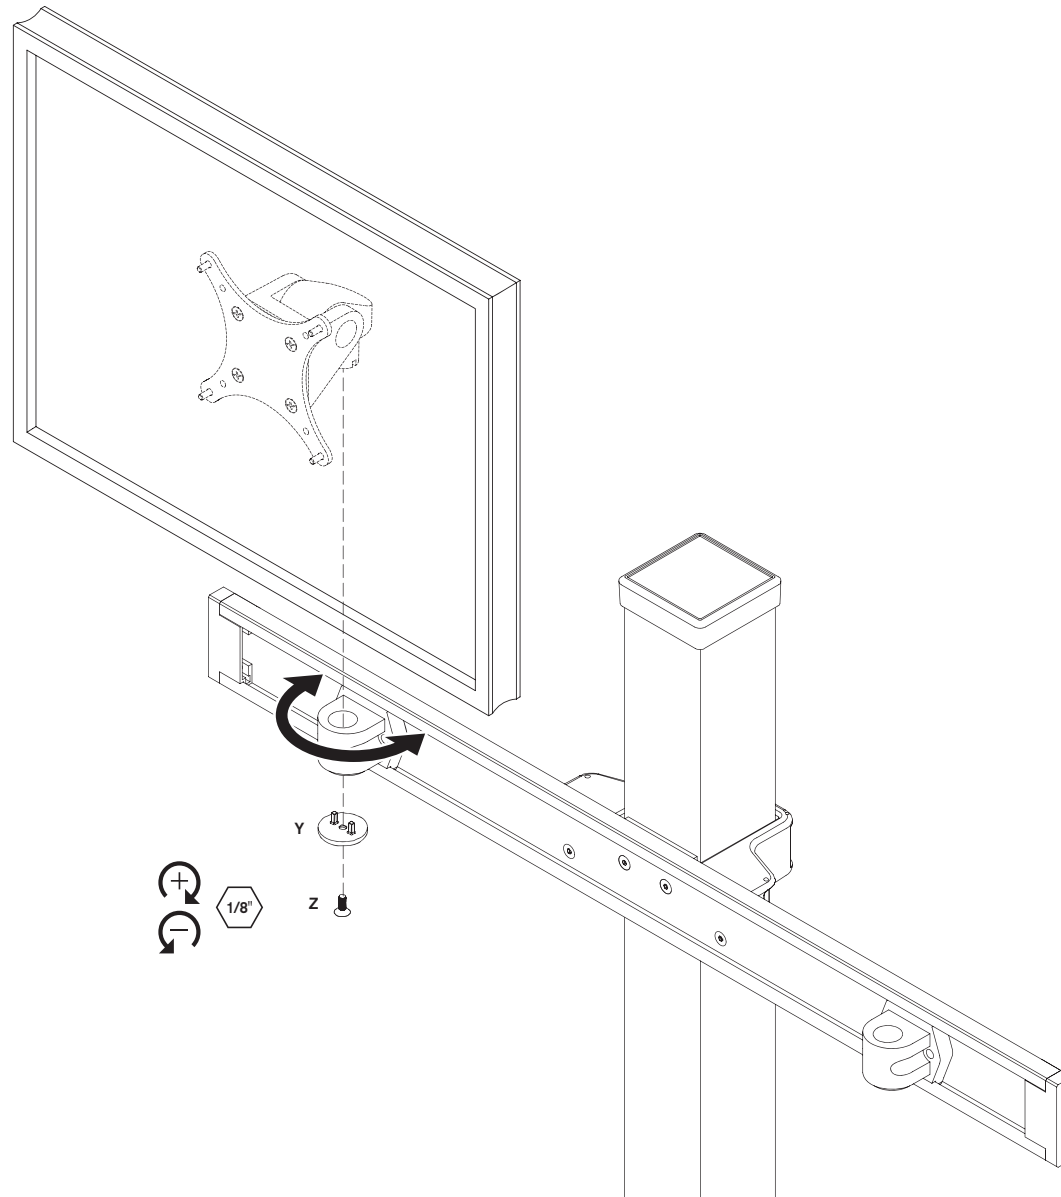


STEP 7

CABLE MANAGEMENT

 1

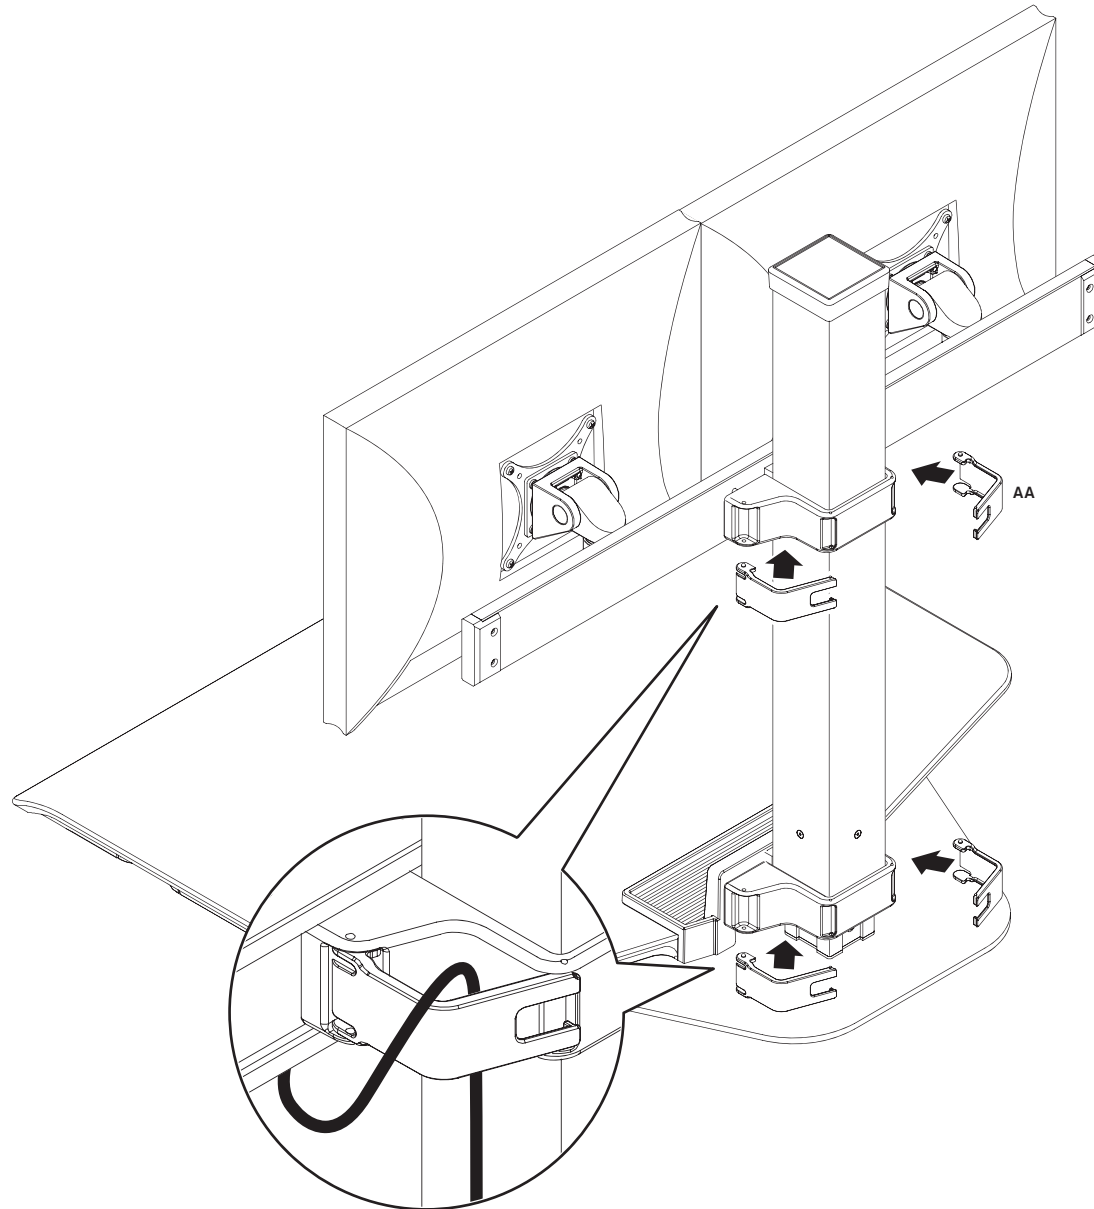

HEIGHT ADJUSTMENT

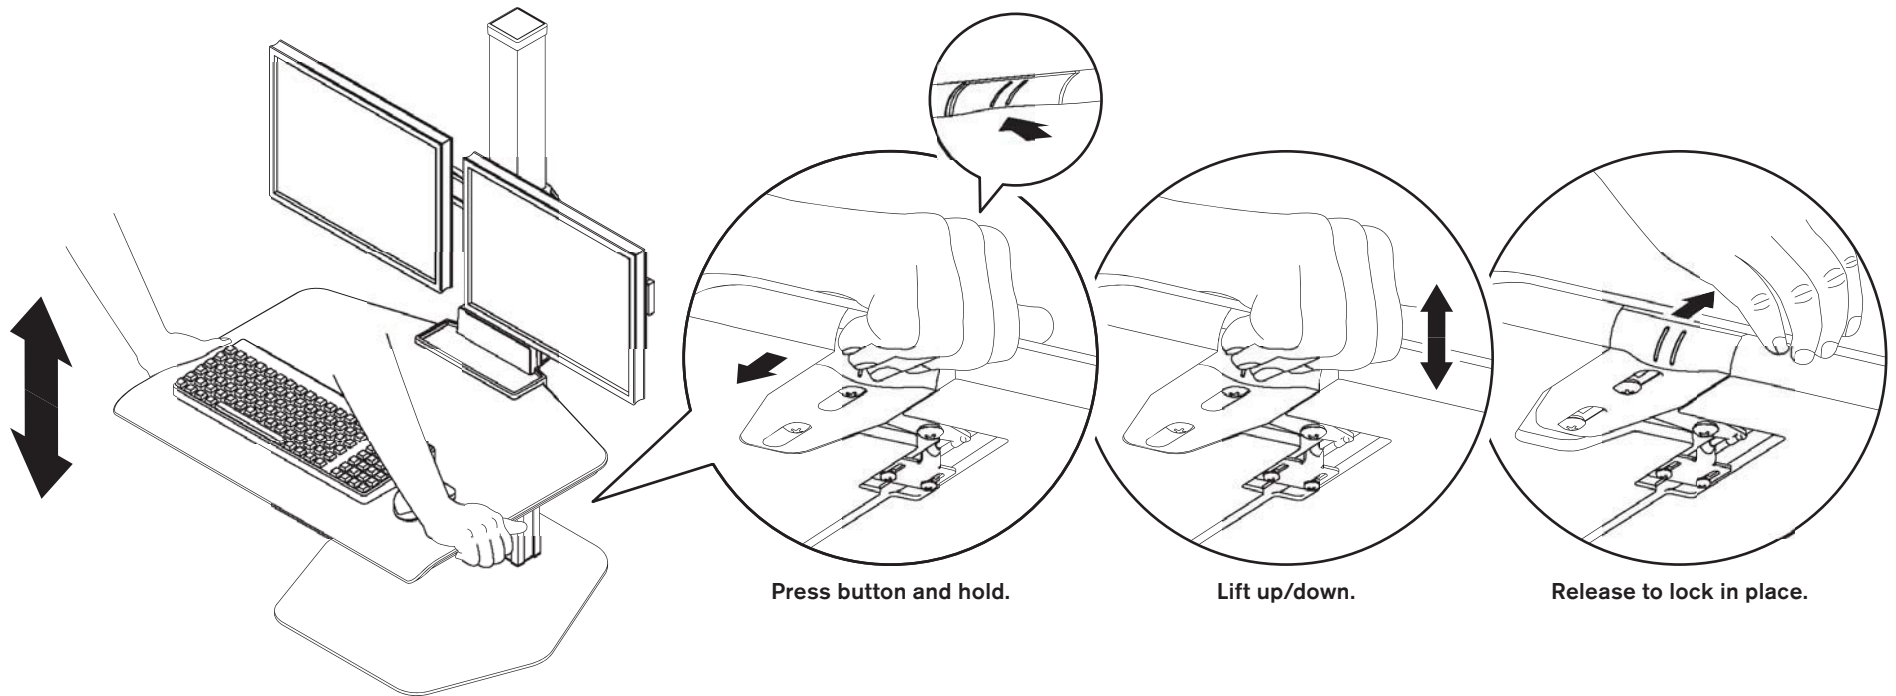 

i Is your height adjust button not working? If so, make the adjustments below.

- 1 Slide workstation so that the work surface hangs over desk edge to allow access to underneath the work surface.
- 2 Loosen the two screws as shown.
- 3 Slide bracket in the direction shown and tighten screws.
- 4 Test height adjust button – readjust by repeating the steps above as necessary.

