


# TRAKSLIDER LOWER ANTI-TIP (LAT) INSTALL INSTRUCTIONS

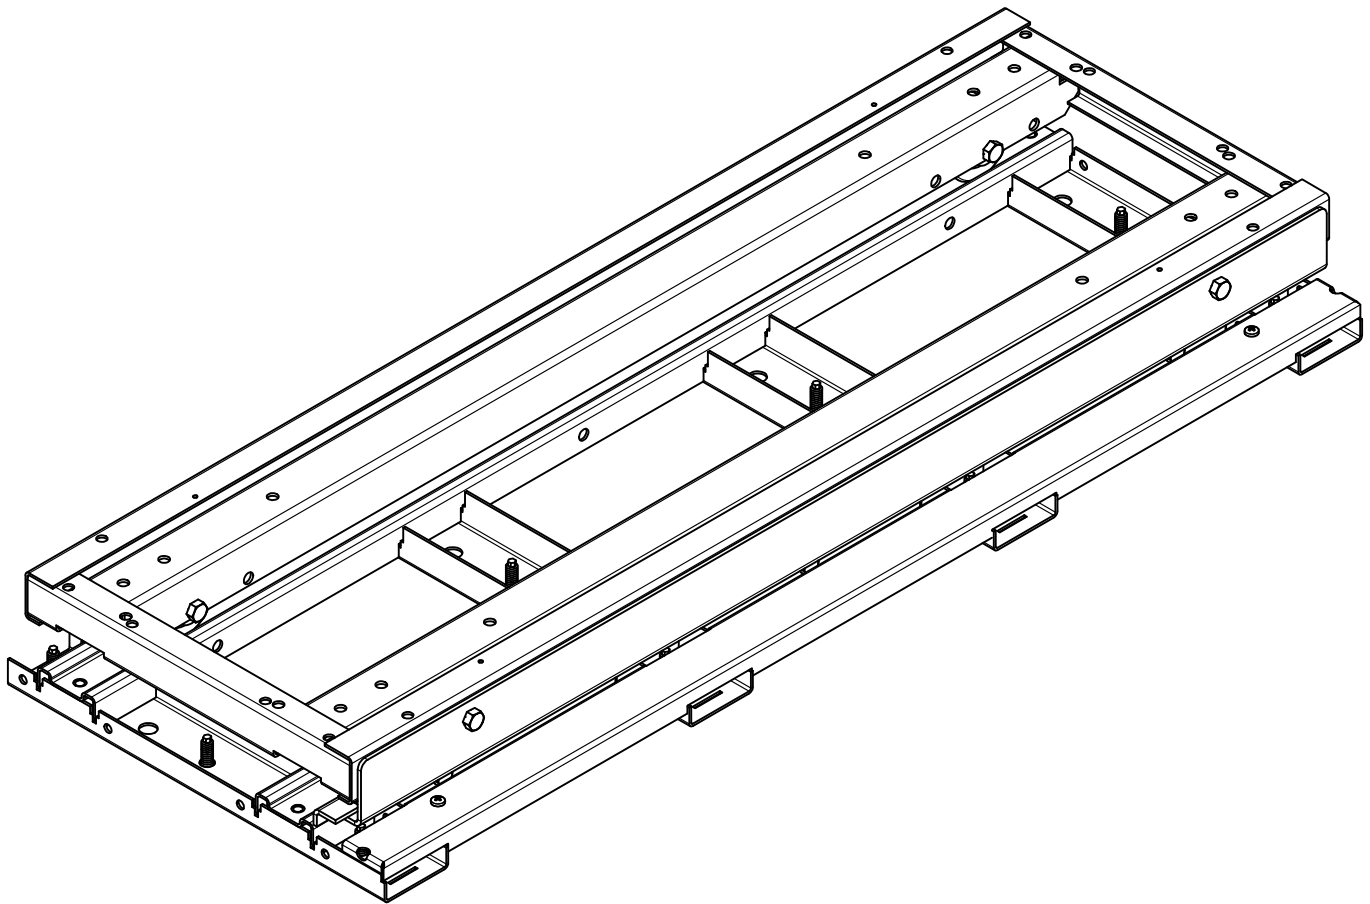


- READ ALL INSTRUCTIONS BEFORE STARTING ASSEMBLY
- OPEN ALL BOXES AND MAKE SURE THAT YOU HAVE ALL REQUIRED COMPONENTS

# TRAKSLIDER LOWER ANTI-TIP (LAT)

## INSTALL INSTRUCTIONS


### TOOLS NEEDED

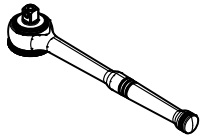


SOCKET WRENCH



1/2" SOCKET


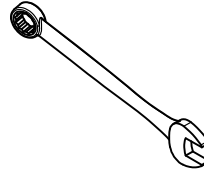


1/2" WRENCH

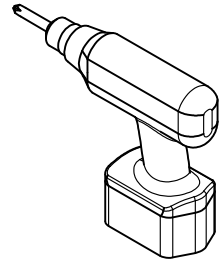


POWER  
DRILL


### INCLUDED HARDWARE



④ 5/16-18 x 3/4"  
HEX HD. BOLT  
QTY (5)




⑤ 5/16-18  
ELASTIC STOP NUT  
QTY (5)




⑥ #10 x 1/2"  
PHIL HD TEK SCREW  
QTY (2)

### COMPONENTS


① BRACKET CARRIAGE TRACK  
ANTI-TIP  
QTY (1)

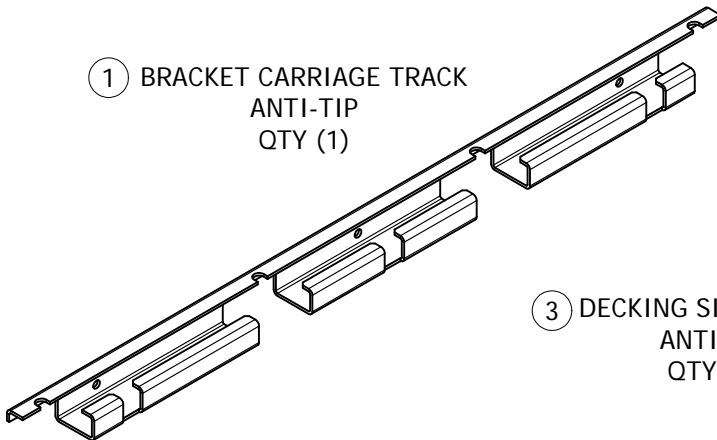

② BRACKET CARRIAGE  
ANTI-TIP  
QTY (1)

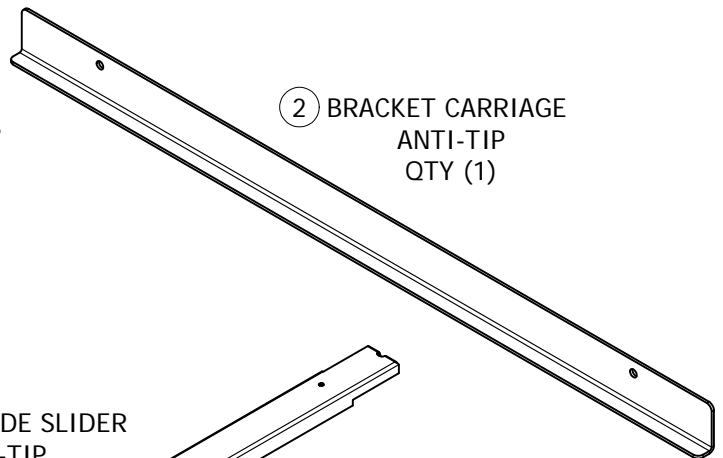

③ DECKING SIDE SLIDER  
ANTI-TIP  
QTY (1)

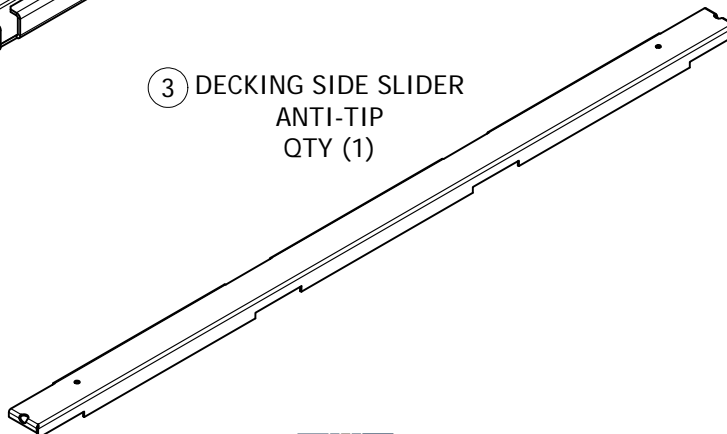


# TRAKSLIDER LOWER ANTI-TIP (LAT)

## INSTALL INSTRUCTIONS

### STEP:1

ATTACH BRACKET CARRIAGE TRACK (ITEM 1) TO CARRIAGE TRACK ON THE SIDE WITH THE SLOT AS SHOWN IN FIGURE A. SECURE WITH QTY. (3) 5/16-18 x 3/4" HEX HD. BOLTS (ITEM 4), AND 5/16-18 ELASTIC STOP NUTS (ITEM 5), AS SHOWN IN FIGURE A.

*FIGURE A*

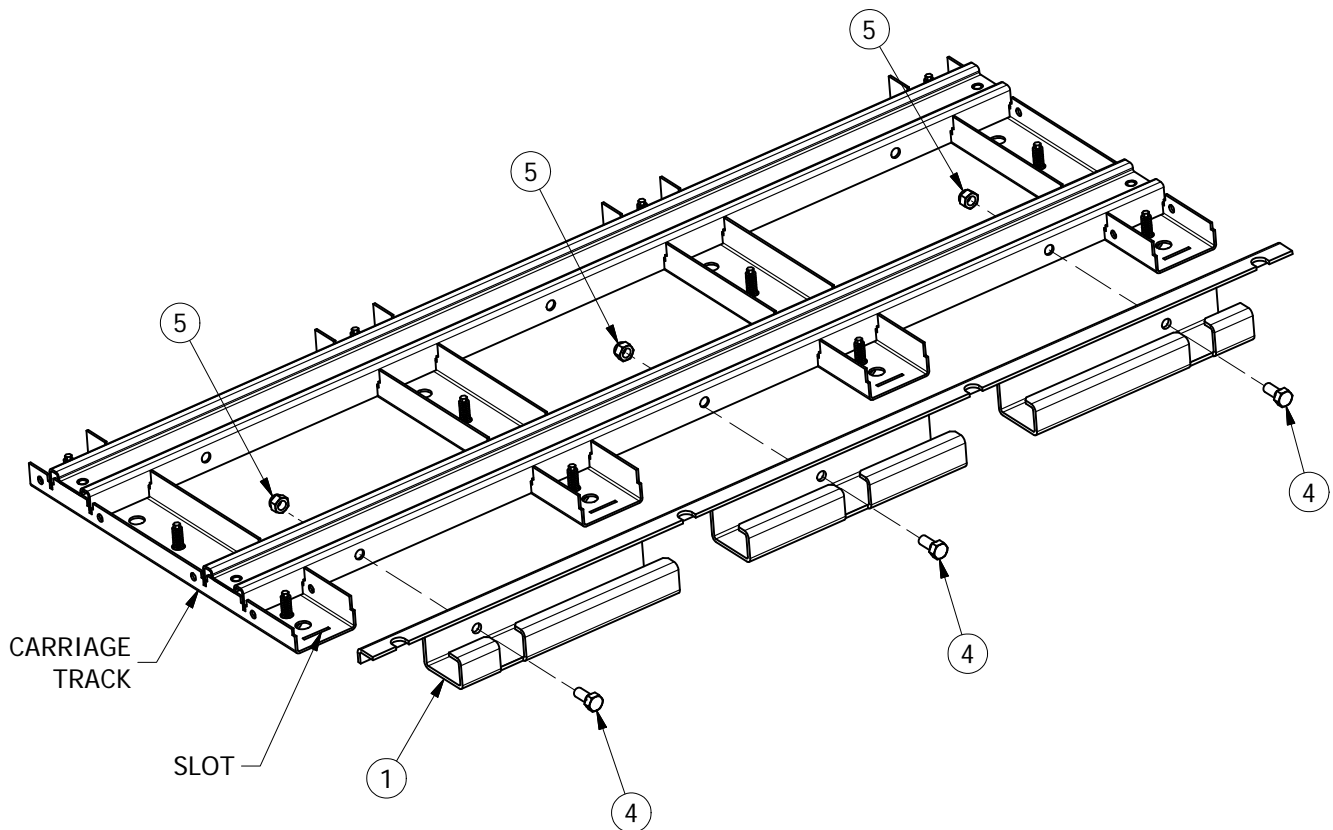


# TRAKSLIDER LOWER ANTI-TIP (LAT)

## INSTALL INSTRUCTIONS


### STEP:2

USING THE 2 HOLES IN THE DECKING SIDE SLIDER (ITEM 3) AS A PILOT, DRILL TEK SCREWS (ITEM 6) INTO FLANGE OF ITEM 1 AS SHOWN IN FIGURE B. FIGURE C SHOWS DECKING SIDE SLIDER INSTALLED.

*FIGURE B*

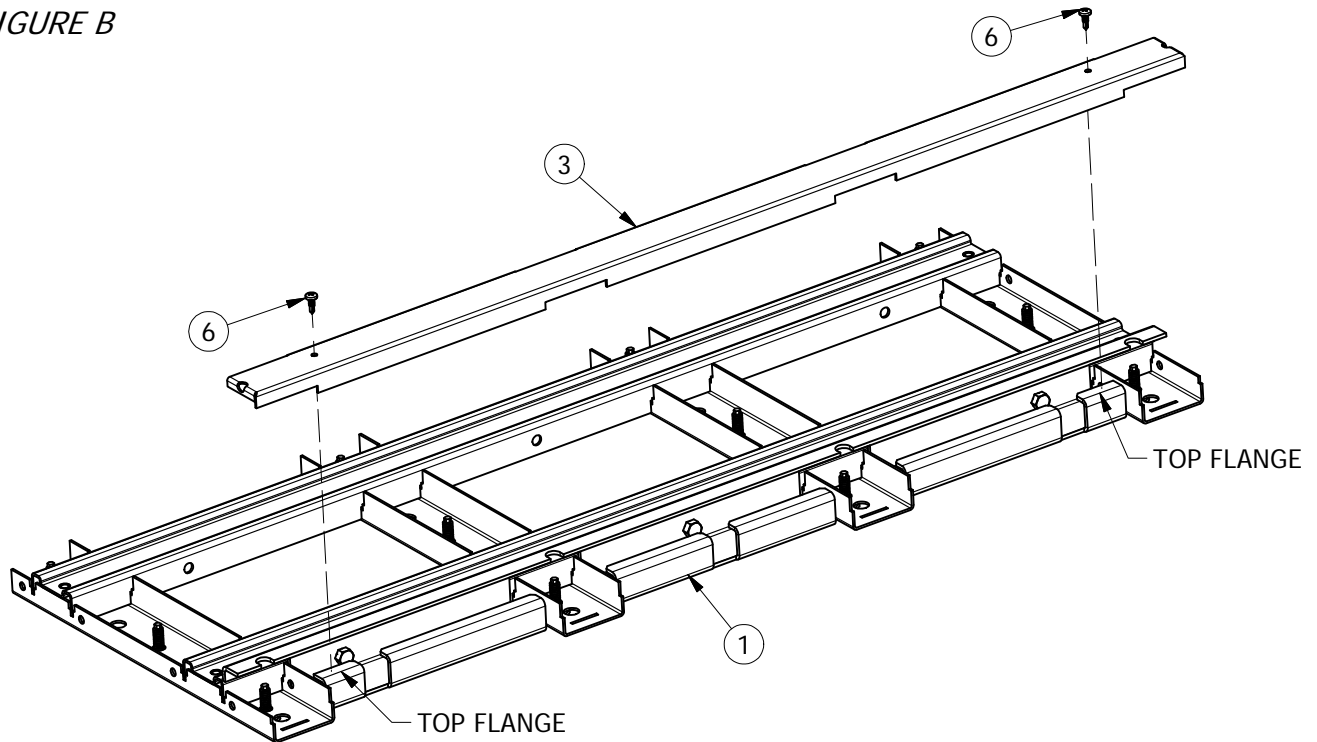

*FIGURE C*

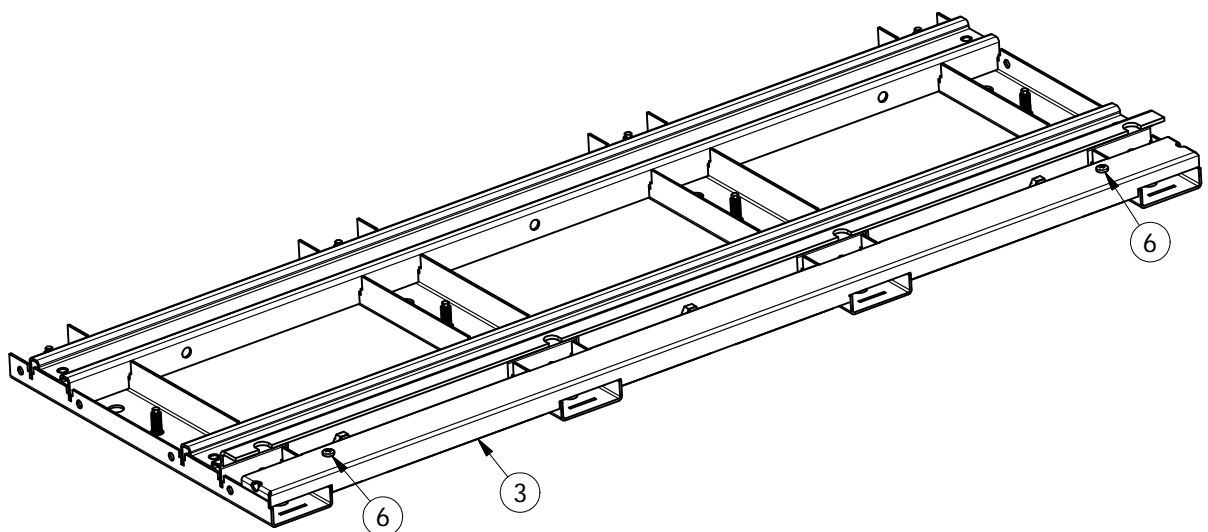

# TRAKSLIDER LOWER ANTI-TIP (LAT)

## INSTALL INSTRUCTIONS

### STEP:3

ATTACH BRACKET CARRIAGE (ITEM 2) TO CARRIAGE, SECURING WITH QTY (2) 5/16-18 x 3/4" (ITEM 4) AND 5/16-18 ELASTIC STOP NUT (ITEM 5). FIGURE E SHOWS BRACKET CARRIAGE INSTALLED.

FIGURE D


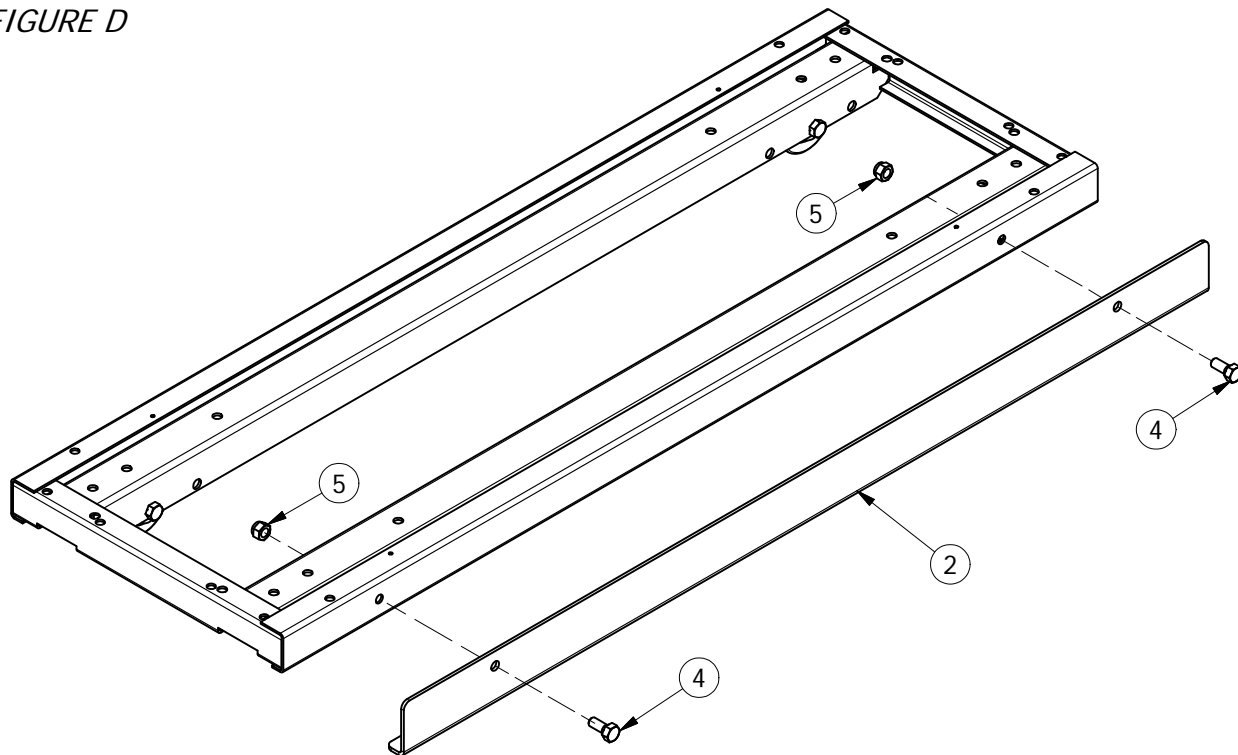


FIGURE E

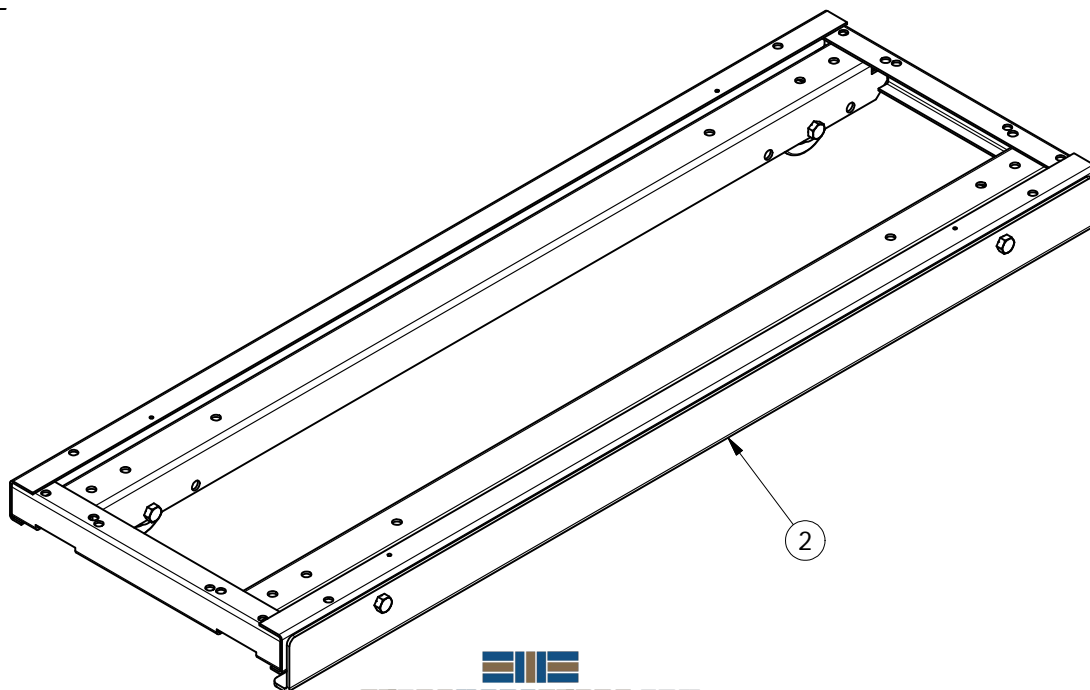


# 

#### STEP:4

POSITION CARRIAGE TRACK IN FRONT OF STATIONARY UNIT, (SEE REFERENCE DIMENSIONS BELOW).  
BOLT CARRIAGE TRACK TO FLOOR THROUGH HOLES IN CROSS MEMBERS USING APPROPRIATE  
HARDWARE FOR TYPE OF FLOOR UNIT IS BEING MOUNTED ON, (SEE BELOW).

FIGURE F

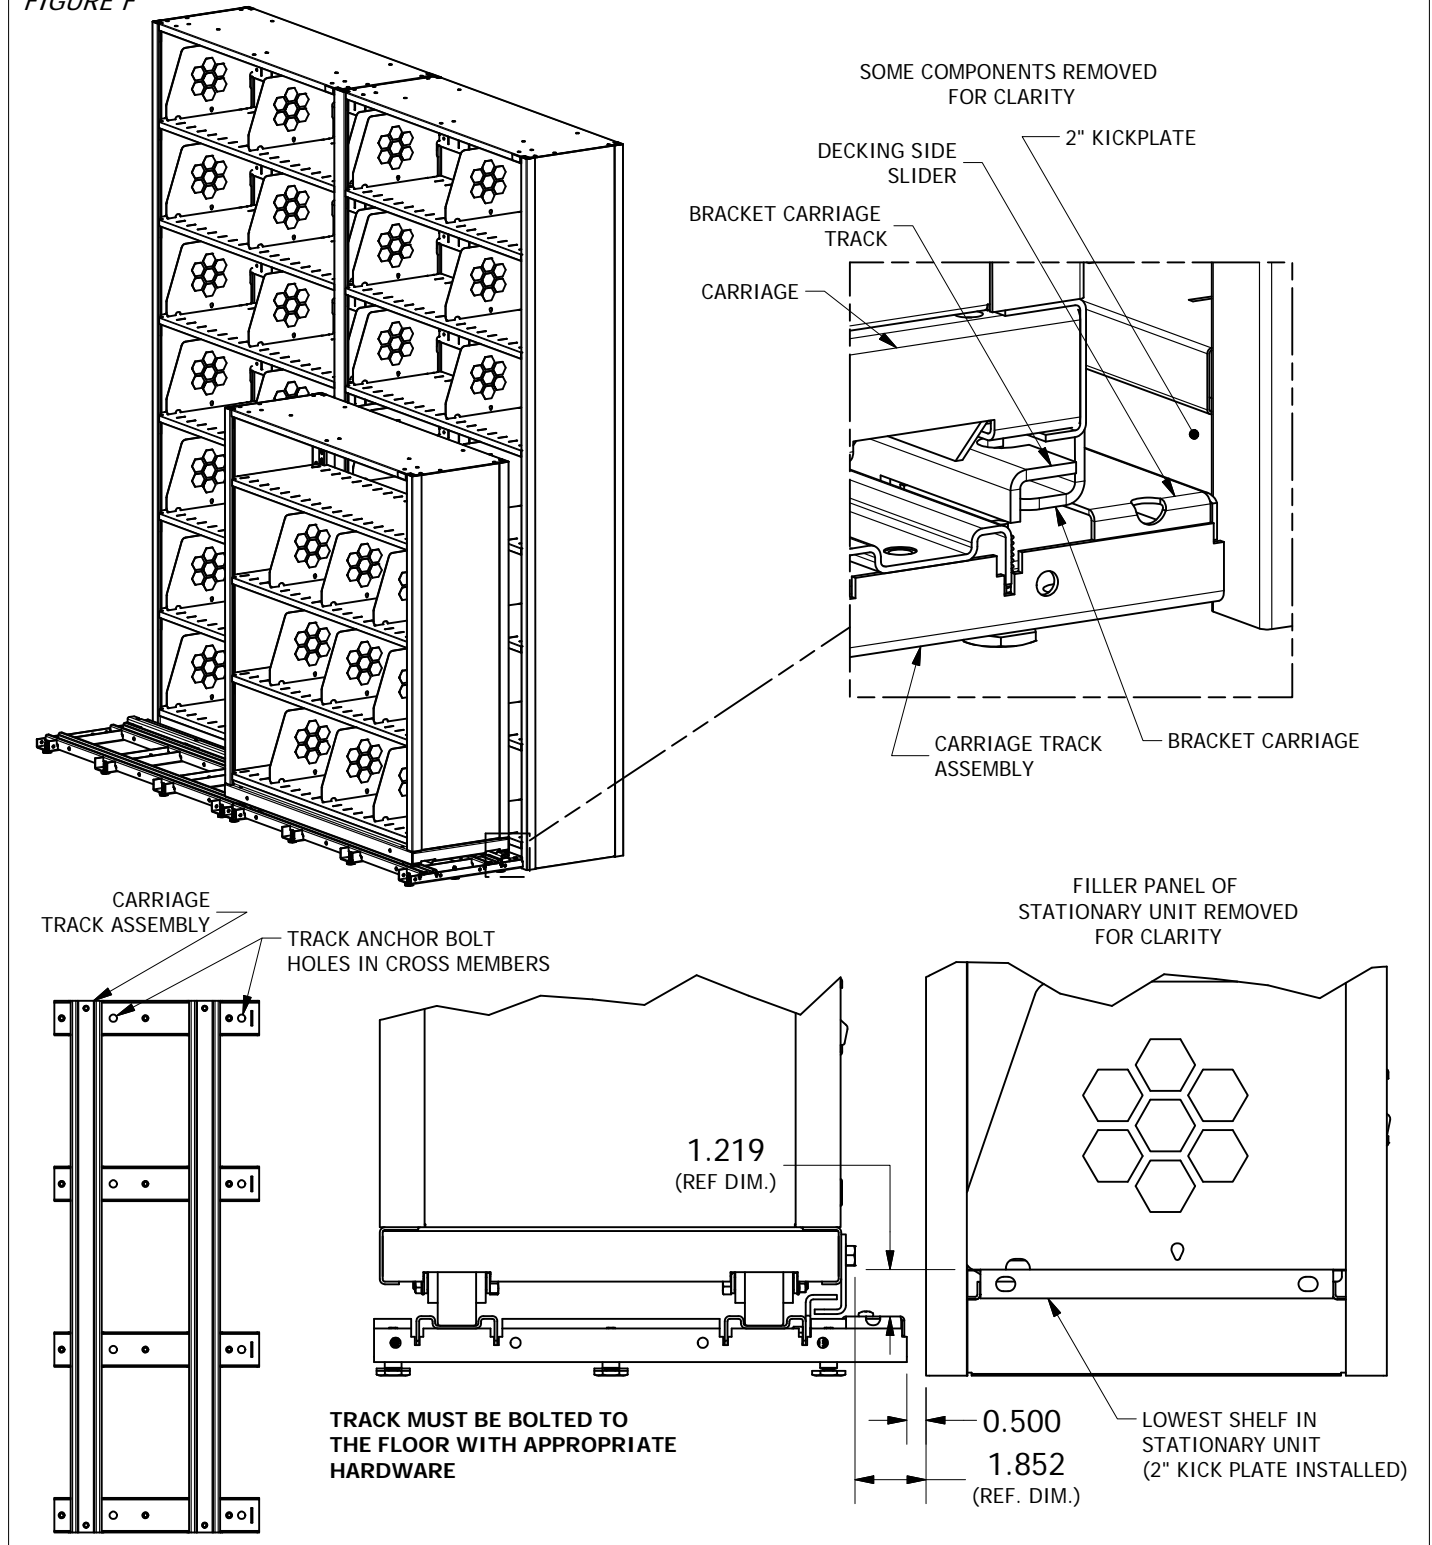

END OF INSTRUCTIONS.