


VALUEMAX™ K.D. WARDROBE STOCK LOCKER ASSEMBLY INSTRUCTIONS

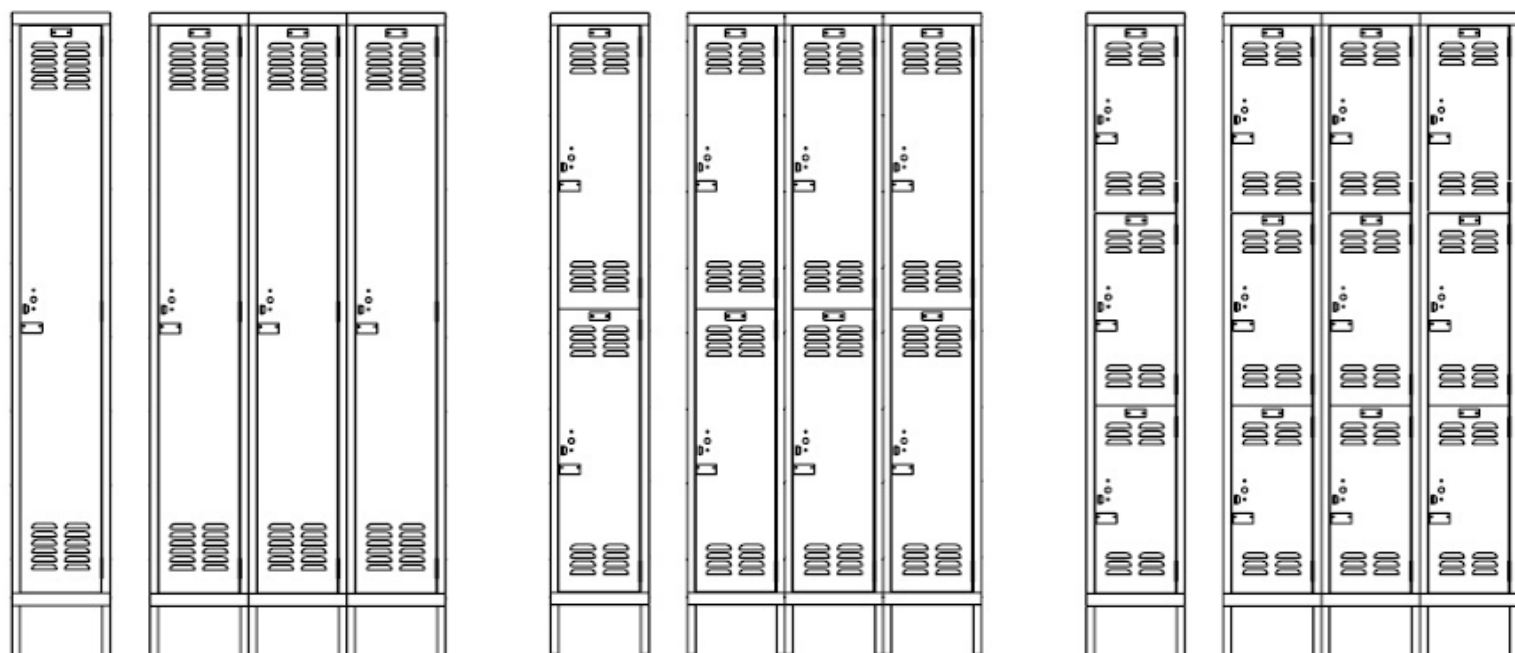

1 WIDE

3 WIDE

SINGLE TIER

1 WIDE

3 WIDE

DOUBLE TIER

1 WIDE

3 WIDE

TRIPLE TIER

General Instructions

1. Check material received against the packing list. First check the number of packages received and then check the contents of each package.
2. Check material received for damage. If damage has occurred, secure a "damage notation" from the carrier.
3. Identify each part as it is unpacked and put like parts together as close as possible to the working area in which they are to be assembled.
4. Be careful to use the correct hardware as specified in the assembly instructions.
5. Items with suffix (xx) are available options.


CAUTION

IN THE INTEREST OF SAFETY, ALL LOCKERS MUST BE SECURELY ANCHORED TO THE FLOOR AND/OR WALL.
FOR SAFETY, HANDLE ALL COMPONENTS CAREFULLY AND WEAR WORK-GLOVES WHEN ASSEMBLING LOCKERS.
INSTALL ALL UNITS PLUMB AND TIGHTEN ALL HARDWARE SECURELY.
RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.


STOREMORESTORE.COM

VALUEMAX™ K.D. WARDROBE STOCK LOCKER ASSEMBLY INSTRUCTIONS

PACKAGE CONTENTS

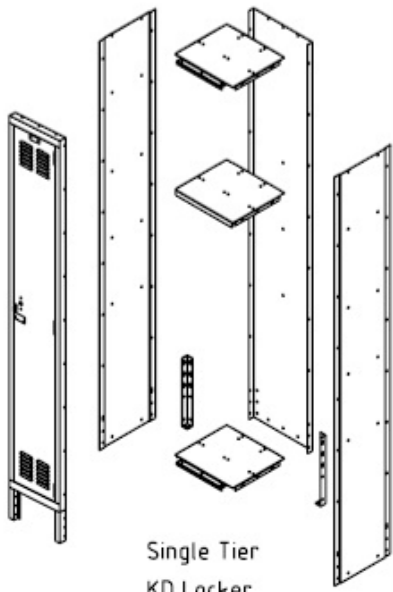REF. NO.	DESCRIPTION	PART NO.	1-WIDE QUANTITY			3-WIDE QUANTITY			
			1-TIER	2-TIER	3-TIER	1-TIER	2-TIER	3-TIER	
①	REAR PANEL	KRwwhh	1	1	1	3	3	3	 <p>Single Tier KD Locker</p>
②	RIGHT/LEFT SIDE PANEL	KPddhh	2	2	2	4	4	4	
③	TOP/BOTTOM SHELF	KSwwdd	2	2	2	6	6	6	
④	HAT SHELF	KHwwdd	1	1	2	3	3	6	
⑤	SINGLE CEILING HOOK	H5K	2	4	-	6	12	-	
⑥	DOUBLE CEILING HOOK	H7K	1	2	3	3	6	9	
xx ⑦	COAT ROD BRACKET	xxTRH 200	xx2	xx4	-	xx6	xx12	-	
xx ⑧	COAT ROD	xxKCR	xx1	xx2	-	xx3	xx6	-	
⑨	DOOR FRAME ASSEMBLY	KDFwwhh-IFP	1	1	1	3	3	3	
x ⑩	DOOR	KDwwhh-tFP	1	2	3	3	6	9	
⑪	NUMBER PLATE	NPH	1	2	3	3	6	9	
⑫	NUMBER PLATE RIVET	RV101	2	4	6	6	12	18	
⑬	3/8" SLOTLESS BOLT	MBT200	62	74	70	134	166	188	
⑭	HEX NUT	N201	60	70	64	128	154	170	
⑮	HI-DOME CAP NUT	N110	2	4	6	6	12	18	
⑯	BOX DOOR LATCH PULL	KBLP100	1	2	3	3	6	9	
xx ⑰	STRIKE PLATE	xxSP100	1	2	3	3	6	9	
⑱	REAR LEG	KLK	2	2	2	2	2	2	
x ⑲	BUMPER	KDB300	3	4	6	9	12	18	
x ⑳	RIVET (HINGE)	RV102	6	8	12	18	24	36	

PART NUMBER SUFFIX SHOWS
WIDTH, DEPTH, HEIGHT AND TIER.
CUSTOMER TO SPECIFY.

NOTE:

FOR OPTIONAL INDIVIDUAL SLOPE TOPS,
SEE SUPPLEMENTAL INSTRUCTION SHEET NO. ASY-H-KIST-A

FOR OPTIONAL 6" HIGH CLOSED METAL BASE,
SEE SUPPLEMENTAL INSTRUCTION SHEET NO. ASY-H-KIST-B

- x SHIPS PRE-HUNG IN DOOR FRAME ASSEMBLY ⑨
- xx OPTIONAL ITEM

PART NO. LEGEND:


ww = WIDTH
dd = DEPTH
hh = HEIGHT (FRAME)
t = TIER

**TOOLS REQUIRED: 3/8" NUT
DRIVER (3/8" SOCKET MAY BE
SUBSTITUTED)**

TWO-YEAR WARRANTY

HALLOWELL K.D. LOCKERS ARE COVERED AGAINST ALL DEFECTS IN MATERIALS AND WORKMANSHIP EXCLUDING FINISH, DAMAGE RESULTING FROM DELIBERATE DESTRUCTION AND VANDALISM FOR A PERIOD OF TWO YEARS.

VALUEMAX™ K.D. WARDROBE STOCK LOCKER ASSEMBLY INSTRUCTIONS

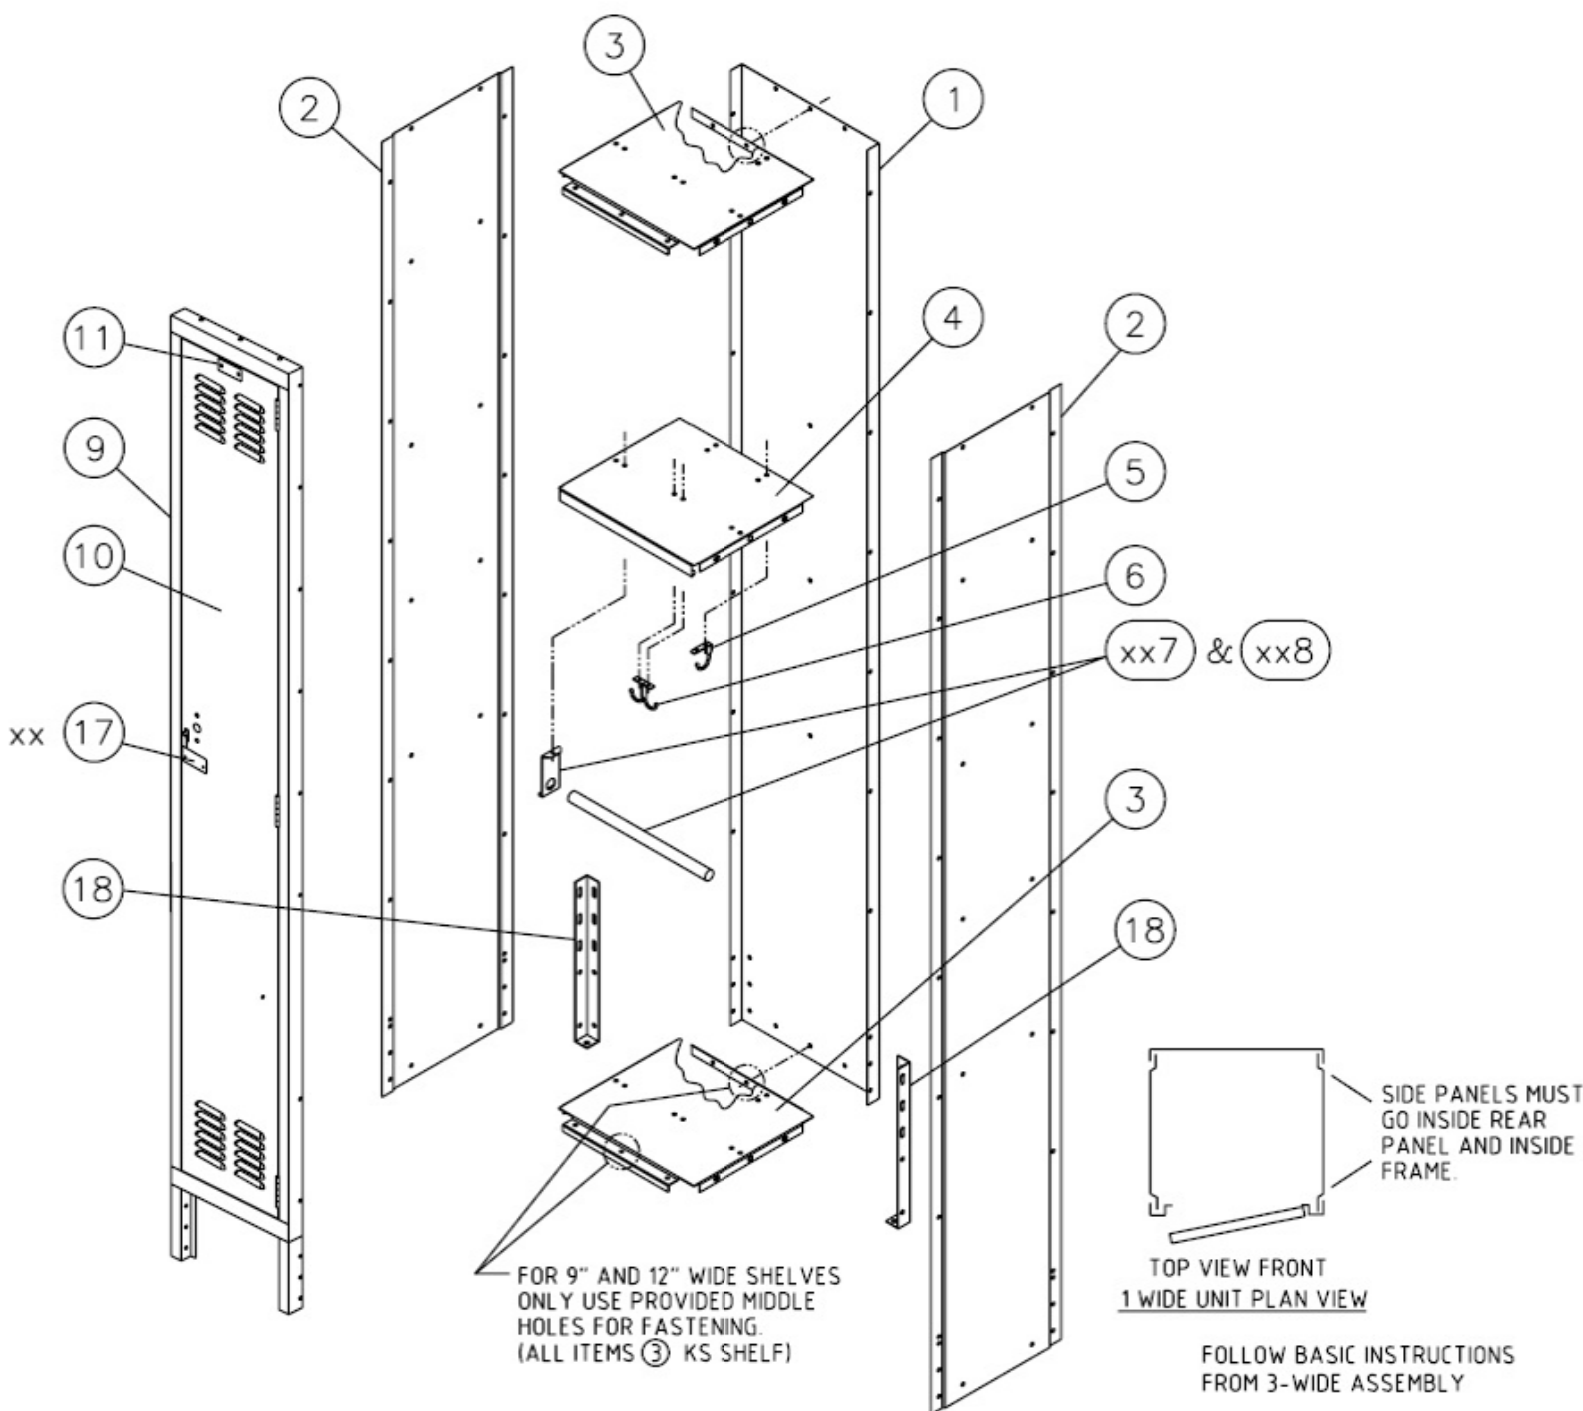

xx - OPTIONAL ITEMS

HALLOWELL MAKES EVERY EFFORT TO ENSURE THAT ALL UNITS SHIP COMPLETE; HOWEVER, SHOULD YOUR UNIT CONTAIN MISSING OR DAMAGED PARTS, REPLACEMENTS MAY BE OBTAINED FROM HALLOWELL. TO OBTAIN PARTS, FOLLOW THESE INSTRUCTIONS.

PLEASE PROVIDE THE FOLLOW INFORMATION:

MODEL NUMBER

DESCRIPTION OF PART(S) NEEDED & PART
NUMBER(S) AS SHOWN IN PARTS LIST

COLOR

PURCHASE DATE


COMPANY NAME & CONTACT PERSON

WHERE THE PRODUCT WAS PURCHASED FROM

IF REQUESTING PARTS BY TELEPHONE, ASK FOR CUSTOMER SERVICE & PROVIDE THE ABOVE INFORMATION.


VALUEMAX™ K.D. WARDROBE STOCK LOCKER ASSEMBLY INSTRUCTIONS

(A GROUPING OF 3-WIDE SINGLE TIER LOCKERS ILLUSTRATED)

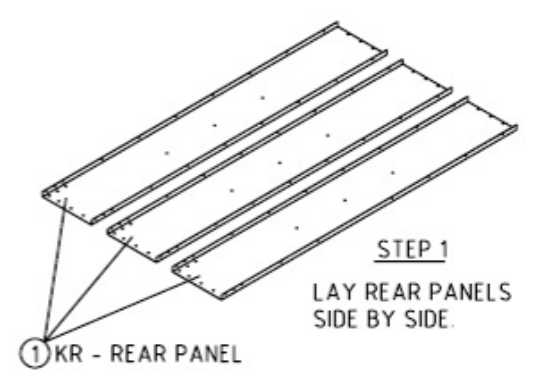


STEP 1
LAY REAR PANELS
SIDE BY SIDE.

① KR - REAR PANEL

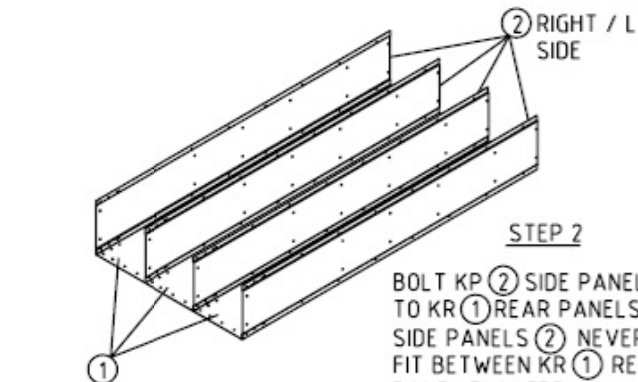


STEP 2
BOLT KP ② SIDE PANELS
TO KR ① REAR PANELS.
SIDE PANELS ② NEVER
FIT BETWEEN KR ① REAR
PANEL FLANGES.

② RIGHT / LEFT
SIDE

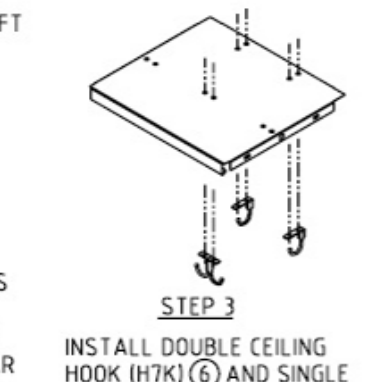


STEP 3
INSTALL DOUBLE CEILING
HOOK (H7K) ⑥ AND SINGLE
CEILING HOOKS (H5K) ⑤
TO (KH) ④ HAT SHELF.

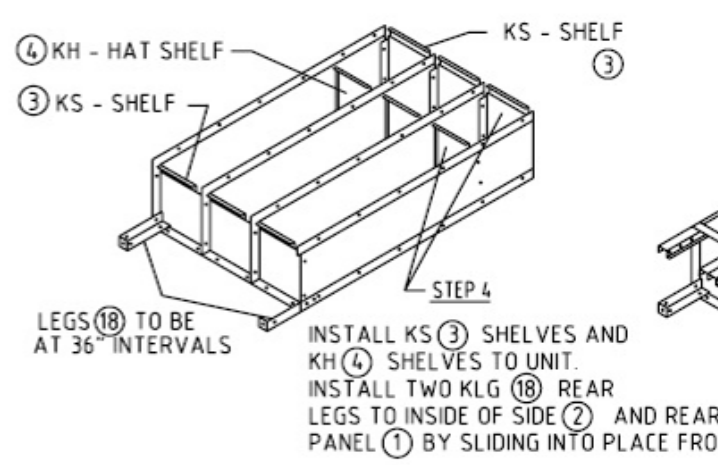

STEP 4
INSTALL KS ③ SHELVES AND
KH ④ SHELVES TO UNIT.
INSTALL TWO KLG ⑧ REAR
LEGS TO INSIDE OF SIDE ② AND REAR
PANEL ① BY SLIDING INTO PLACE FROM BOTTOM.


④ KH - HAT SHELF
③ KS - SHELF

LEGS ⑧ TO BE
AT 36" INTERVALS

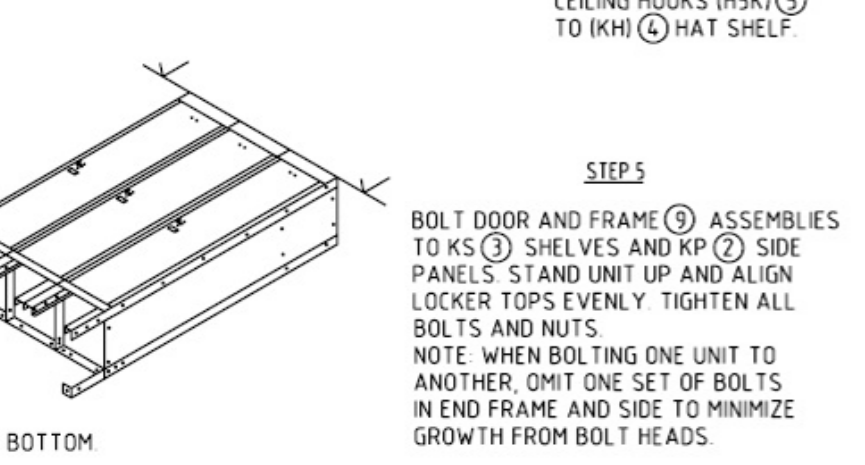


STEP 5
BOLT DOOR AND FRAME ⑨ ASSEMBLIES
TO KS ③ SHELVES AND KP ② SIDE
PANELS. STAND UNIT UP AND ALIGN
LOCKER TOPS EVENLY. TIGHTEN ALL
BOLTS AND NUTS.
NOTE: WHEN BOLTING ONE UNIT TO
ANOTHER, OMIT ONE SET OF BOLTS
IN END FRAME AND SIDE TO MINIMIZE
GROWTH FROM BOLT HEADS.

ASSEMBLY OF SINGLE ROW LOCKERS
NEVER PUT SIDE PANELS BETWEEN
FRAMES OR REAR PANELS.

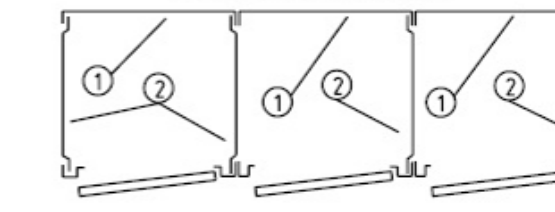

SIDE PANELS MUST
GO INSIDE REAR
PANEL AND INSIDE
FRAME.

SINGLE TIER EXAMPLE - 3 WIDE UNIT PLAN VIEW

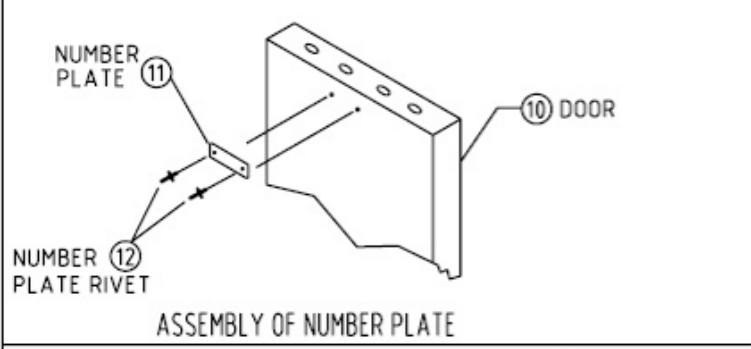

NUMBER
PLATE ⑪



⑩ DOOR

NUMBER ⑫
PLATE RIVET

ASSEMBLY OF NUMBER PLATE

OPTIONAL COAT ROD
BRACKETS TO BE BOLTED TO UNDERSIDE
OF HAT SHELF WITH COAT ROD IN BETWEEN.

xx ⑦ COAT ROD BRACKETS (xxTRH 200)
xx ⑧ COAT ROD (xxKCRww)

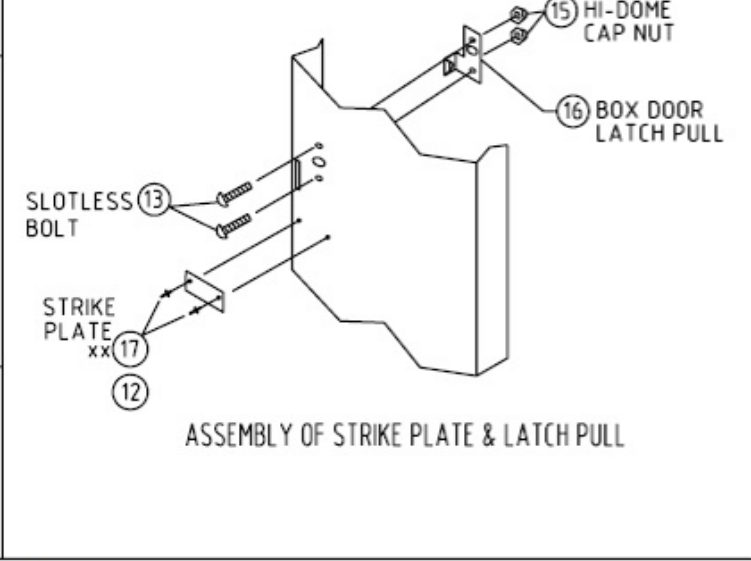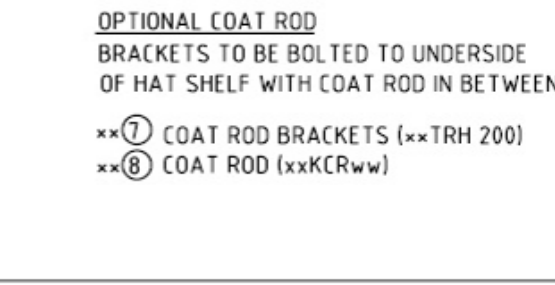

⑮ HI-DOME
CAP NUT

⑯ BOX DOOR
LATCH PULL


SLOTLESS
BOLT ⑬

STRIKE
PLATE
xx ⑰

⑫

ASSEMBLY OF STRIKE PLATE & LATCH PULL

⑥ DOUBLE CEILING HOOK (H7K)
TO BE BOLTED TO
UNDERSIDE OF HAT SHELF.



⑤ SINGLE CEILING HOOK (H5K)
TO BE BOLTED TO
UNDERSIDE OF HAT SHELF.

