



# Welded Wire Partitions with Single Slide Doors

## Panel and Post Installation


### PARTS PROVIDED:

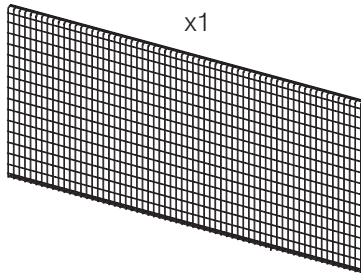

WELDED WIRE PANEL  
(VARIOUS SIZES)

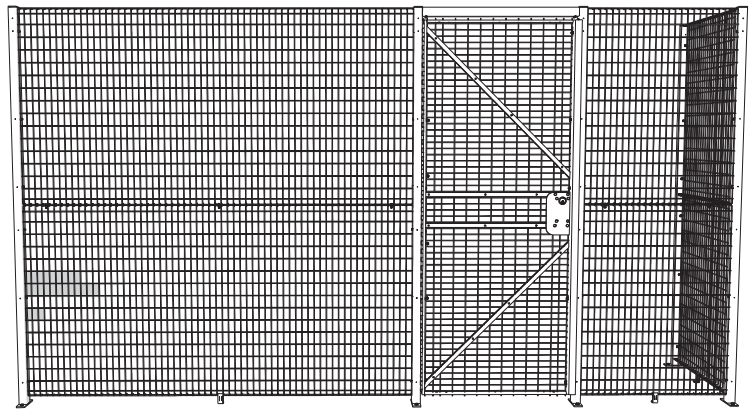

### TOOLS REQUIRED:

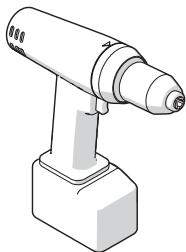


ELECTRIC DRILL




5/16"




Ø 5/16" & Ø 3/8"  
MASONRY BIT




MALLET




LEVEL



MEASURING  
TAPE



9/16"



7/16"

OPEN END  
WRENCH




WIRE CUTTERS



LADDER




### HARDWARE PROVIDED:

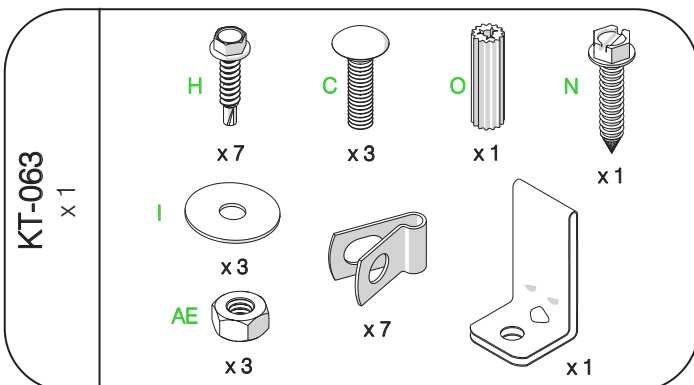

### HARDWARE LIST:


- (C) 1/4"-20 x 1" SQUARE NECK CARRIAGE BOLT
- (H) #12-14 x 1" HEX HEAD SELF-DRILLING SCREW
- (I) 1/4" FLAT WASHER
- (N) #14-10 x 1-1/4" SLOTTED HEX HEAD SMS
- (O) #14 x 1" TUBULAR PLASTIC ANCHOR
- (P) 3/8" x 3-3/4" WEDGE ANCHOR
- (AE) 1/4"-20 HEX NUT

1

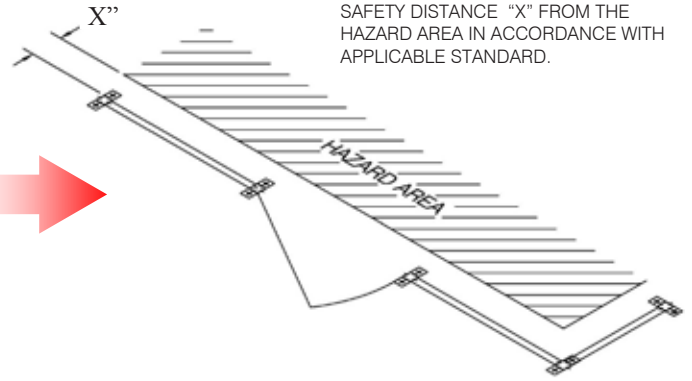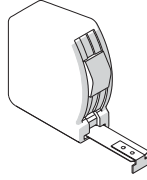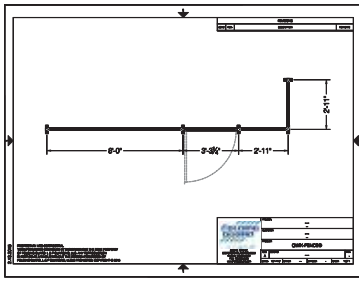


SAFETY DISTANCE "X" FROM THE HAZARD AREA IN ACCORDANCE WITH APPLICABLE STANDARD.


2

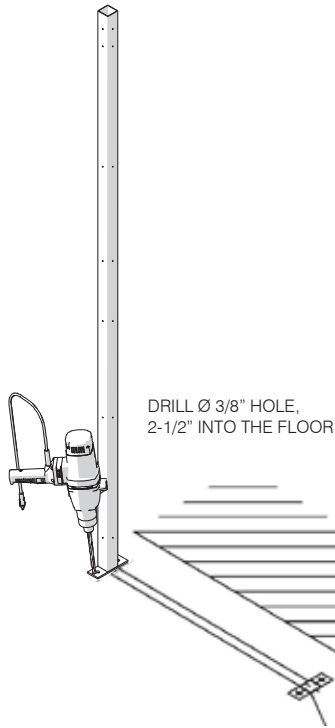


3

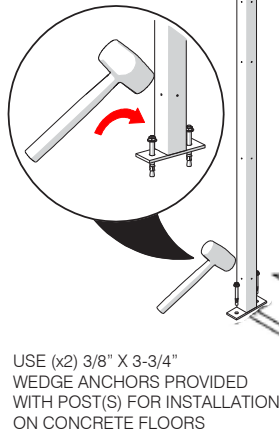

4

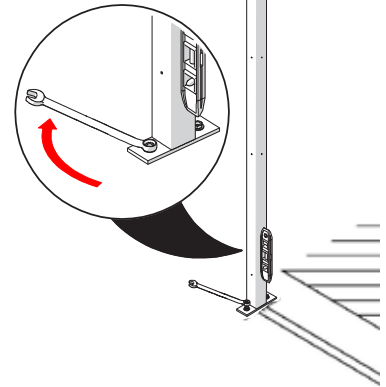


5

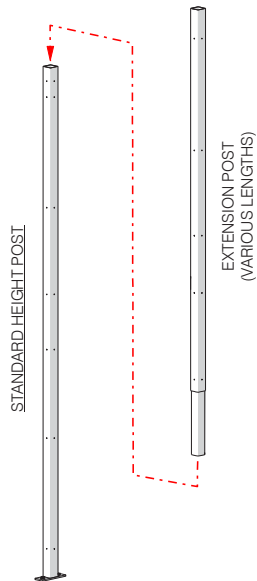




NOTE: STEP 5 IS FOR PARTITION TALLER THAN 8'-0" HIGH ONLY

6

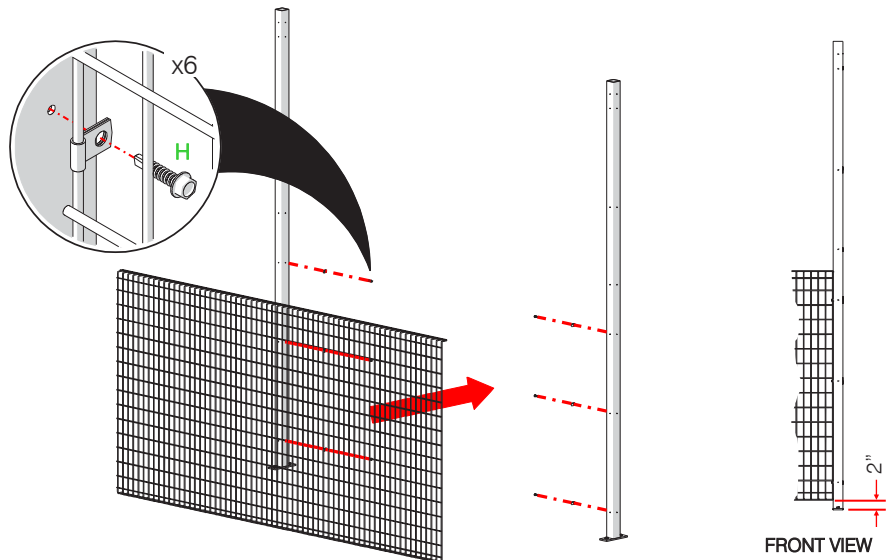


**STOREMORESTORE**


[www.StoreMoreStore.com](http://www.StoreMoreStore.com) | 855-786-7667

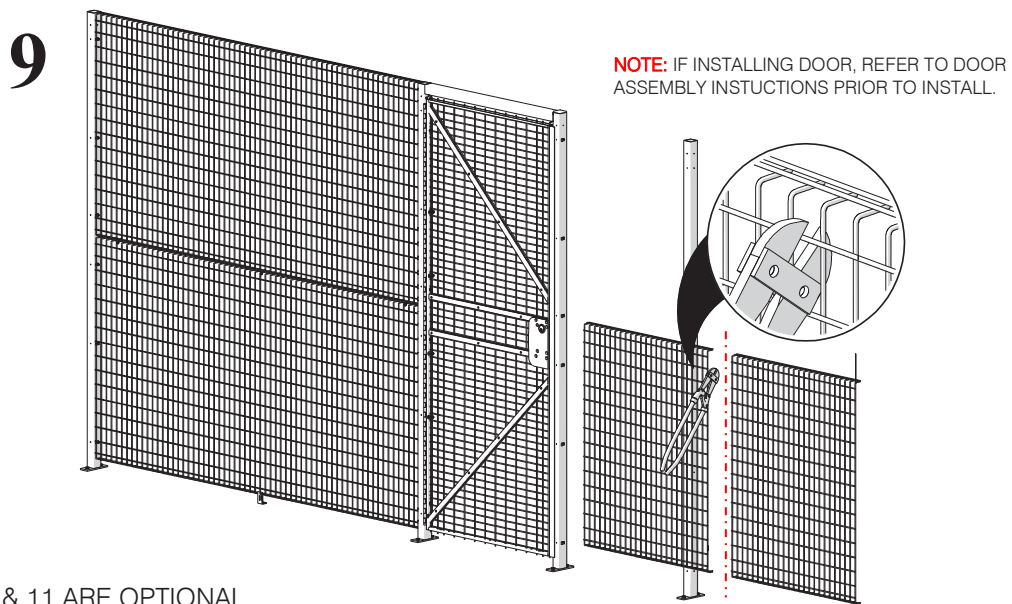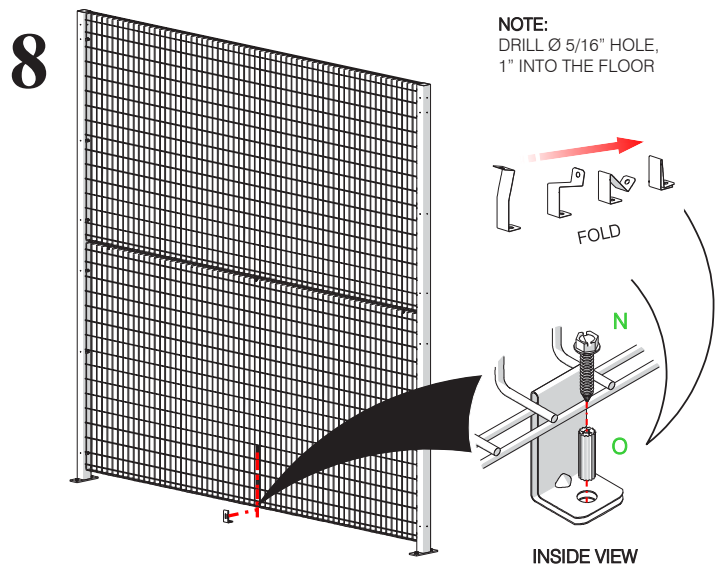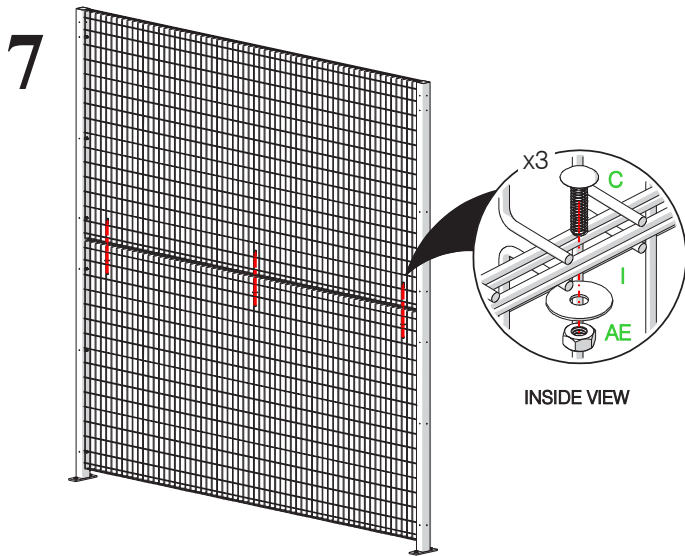

NOTE: STEPS 10 & 11 ARE OPTIONAL

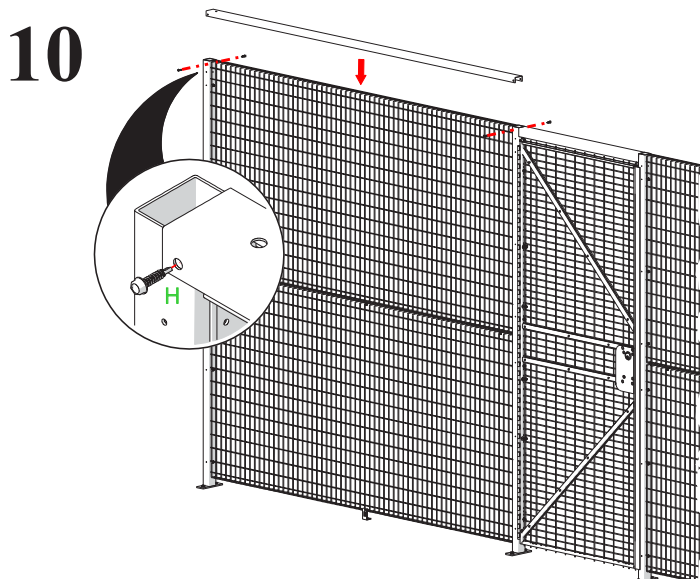


11 IF INSTALLING TO A WALL, A WALL KIT IS REQUIRED (SEE INSTRUCTION SHEET FGI-316)

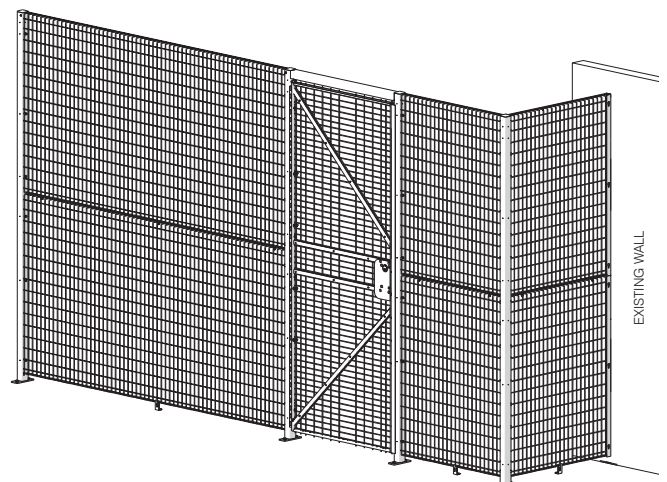

# Single Slide Door


*Snap Lock, Pad Lock, & Cylinder Lock  
Installation Instructions*

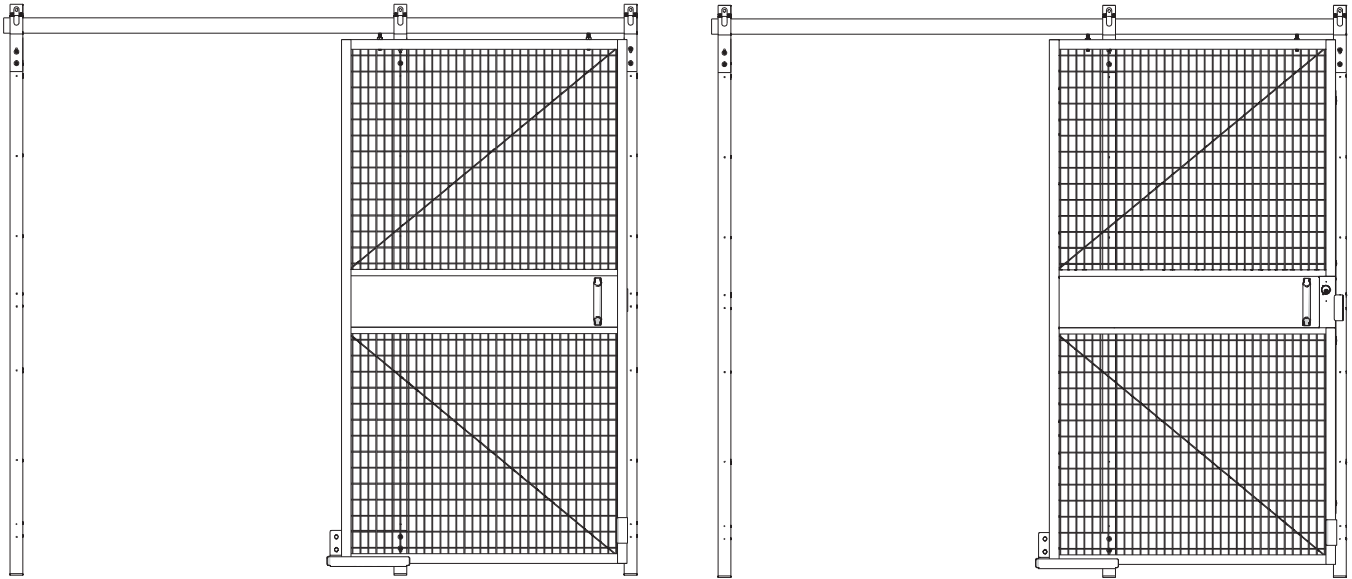

**NOTE:**

REFER TO INSTRUCTION SHEET FGI-217 TO INSTALL DOORS LARGER THEN 4'-0" WIDE (INCLUDED WITH KT6001)


## TOOLS REQUIRED:

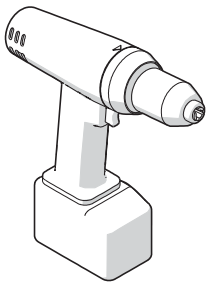

BATTERY DRILL




5/16"  
[8mm]

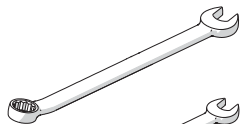


3/4"  
[19mm]



9/16"  
[15mm]



1/2"  
[13mm]




7/16"  
[11mm]


OPEN END WRENCH




LADDER

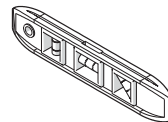


LEVEL

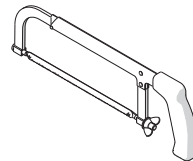

HACKSAW

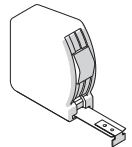

MEASURING TAPE

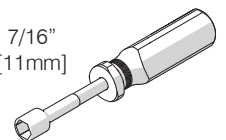


7/16"  
[11mm]

SOCKET DRIVER




HARDWARE PROVIDED:


KT6032  
x 3

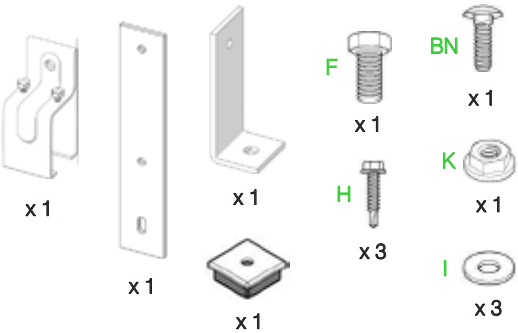


KT6005  
x 2

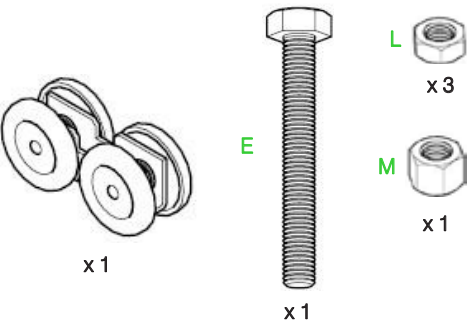


KT6009  
x 1

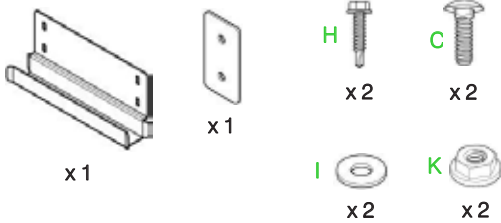


KT6006  
x 1

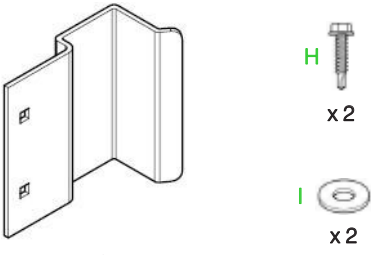




KT6014  
x 1

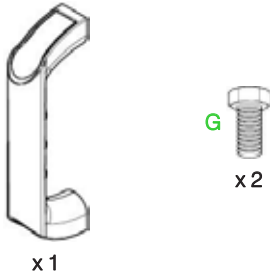

KT6022  
x 2

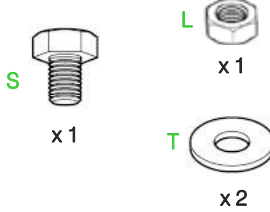

## HARDWARE PROVIDED:

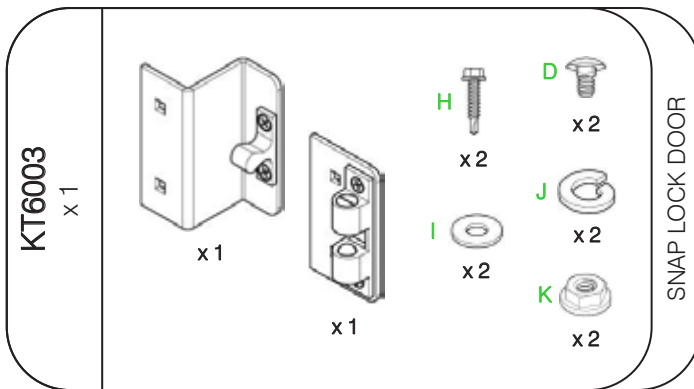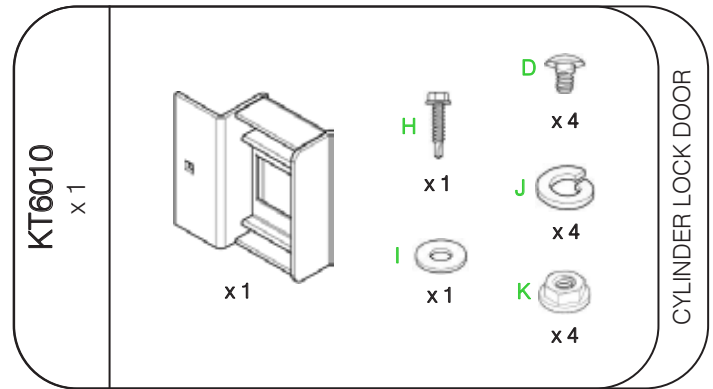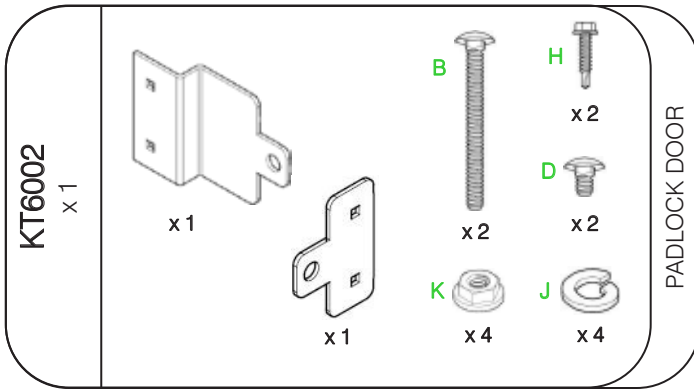


## HARDWARE LIST:

- (B) 1/4"-20 x 2-1/2" SQUARE NECK CARRIAGE BOLT
- (C) 1/4"-20 x 1" SQUARE NECK CARRIAGE BOLT
- (D) 1/4"-20 x 1/2" SQUARE NECK CARRIAGE BOLT
- (E) 1/2"-13 x 4" HEX HEAD BOLT
- (F) 3/18"-16 x 1" HEX HEAD BOLT
- (G) M8-1.25 x 20 HEX HEAD BOLT
- (H) #12-14 x 1" HEX HEAD SELF-DRILLING SCREW
- (I) 1/4" FLAT WASHER
- (J) 1/4" LOCK WASHER
- (K) 1/4"-20 FLANGE NUT
- (L) 1/2"-13 HEX JAM NUT
- (M) 1/2"-13 NYLON LOCK NUT
- (S) 1/2"-13 x 1" HEX HEAD BOLT
- (T) 1/2" FLAT WASHER
- (BN) 1/4"-20 x 1-1/4" SQUARE NECK CARRIAGE BOLT
- (CD) 14-10 x 1" PHILLIPS TRUSS HEAD SHEET METAL SCREW


# 1

	A (OPENING)
QF-S3X-X	34" [864mm]
QF-S4X-X	46" [1168mm]
QF-S5X-X	58" [1473mm]
QF-S6X-X	70" [1778mm]
QF-S8X-X	94" [2388mm]
QF-S10X-X	118" [2997mm]

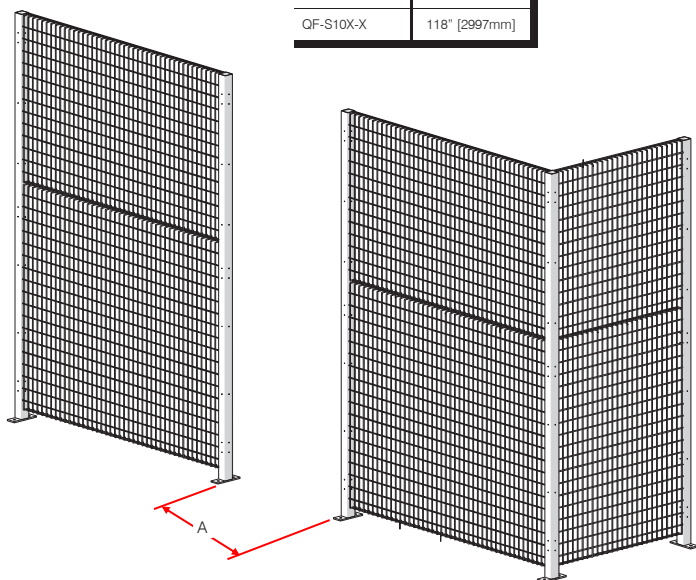

# 2


## TRACK BRACKET INSTALLATION (FULL HEIGHT DOORS)

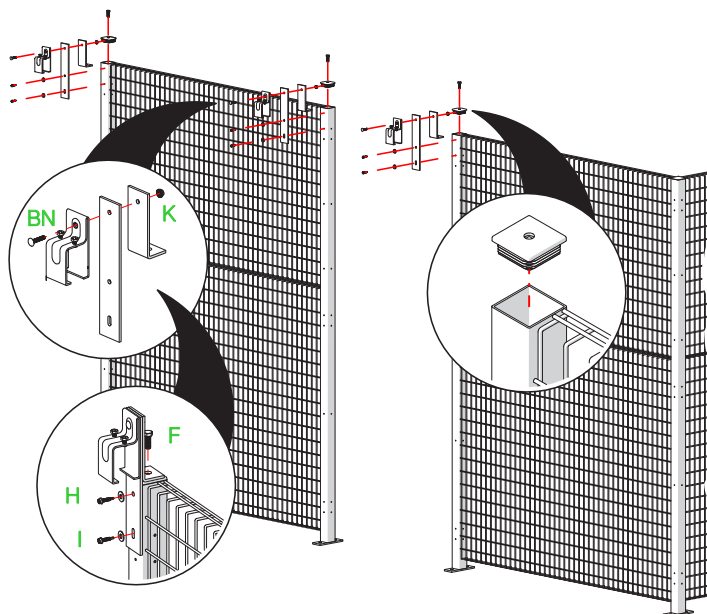


# 3

## TRACK BRACKET INSTALLATION (DOORS WITH PANELS ABOVE)


	# OF BRACKETS
QF-S3X-X	3
QF-S4X-X	3
QF-S5X-X	4
QF-S6X-X	4
QF-S8X-X	4
QF-S10X-X	4

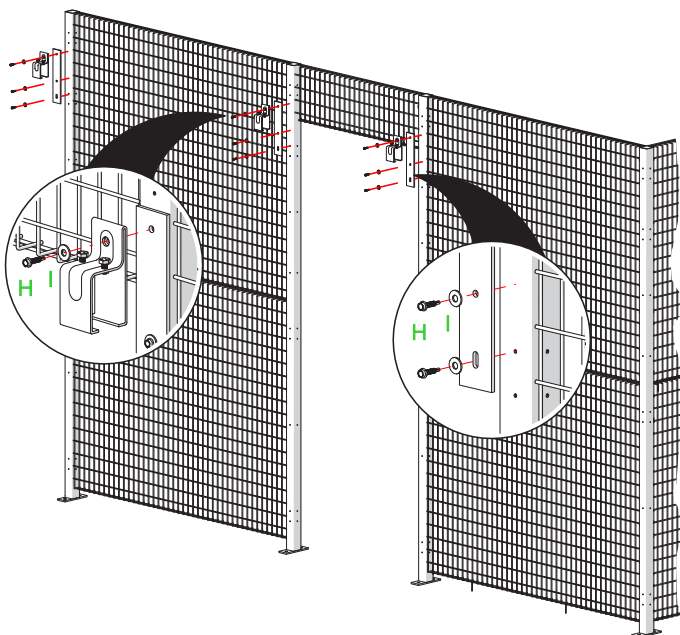


4

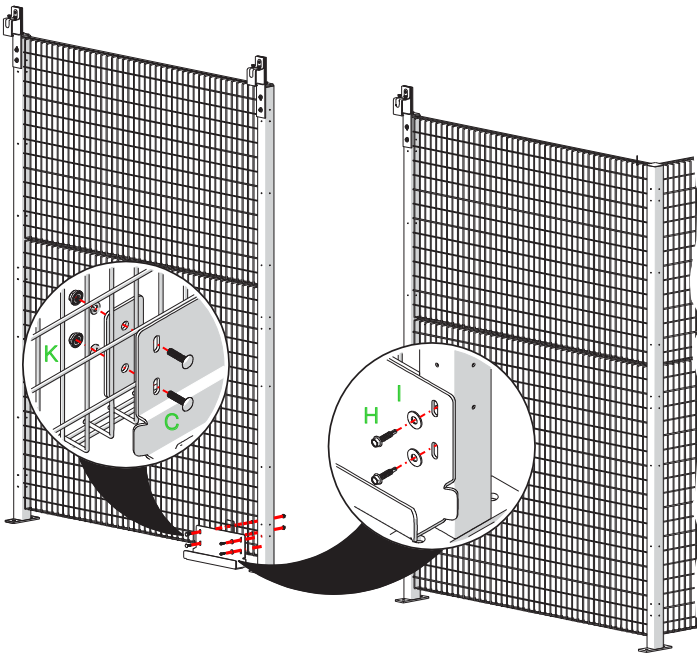


6

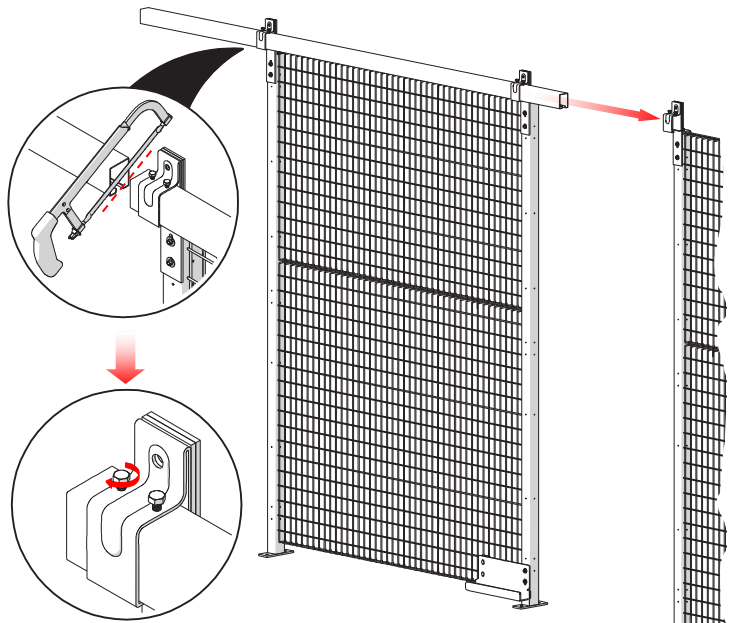

7

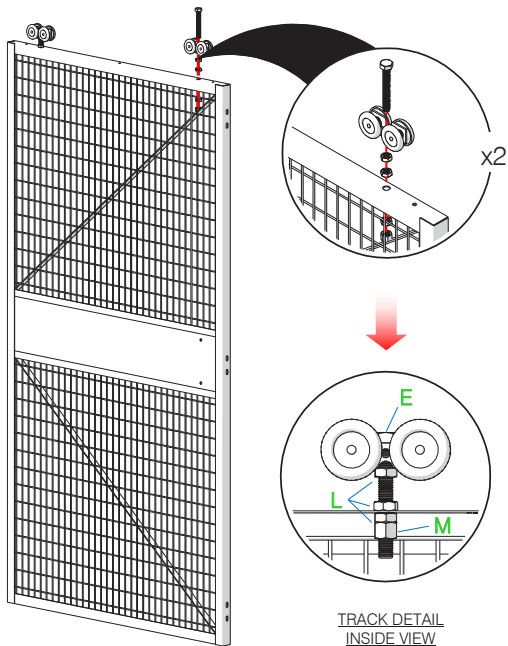


8

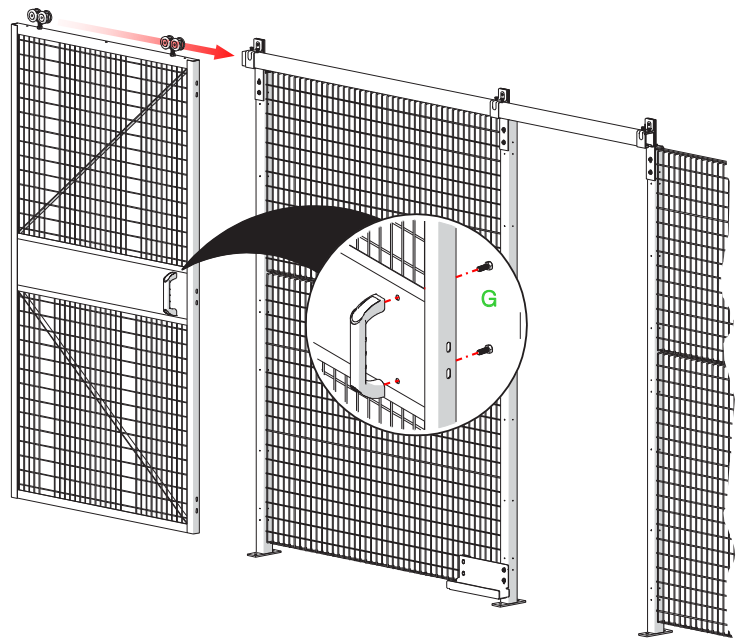


# 9


## PADLOCK INSTALLATION (STEPS 9 THRU 12 ARE FOR PADLOCK INSTALLATION ONLY)

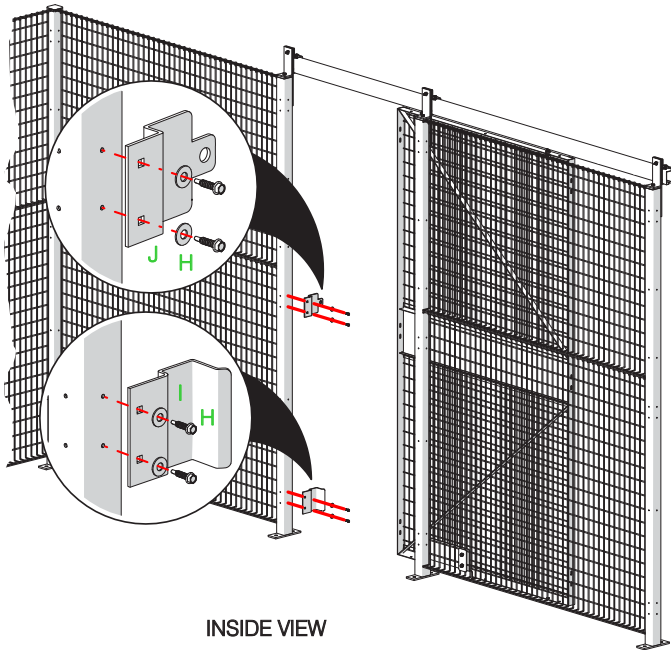


# 10

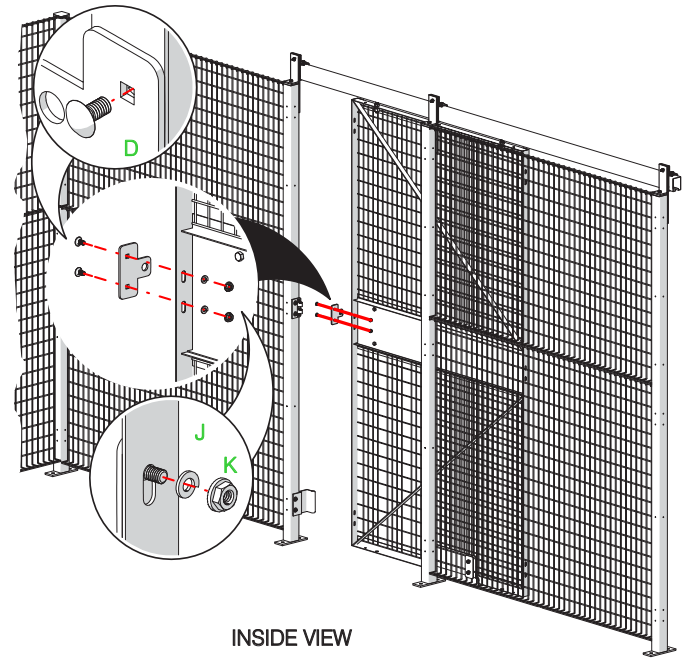

# 11

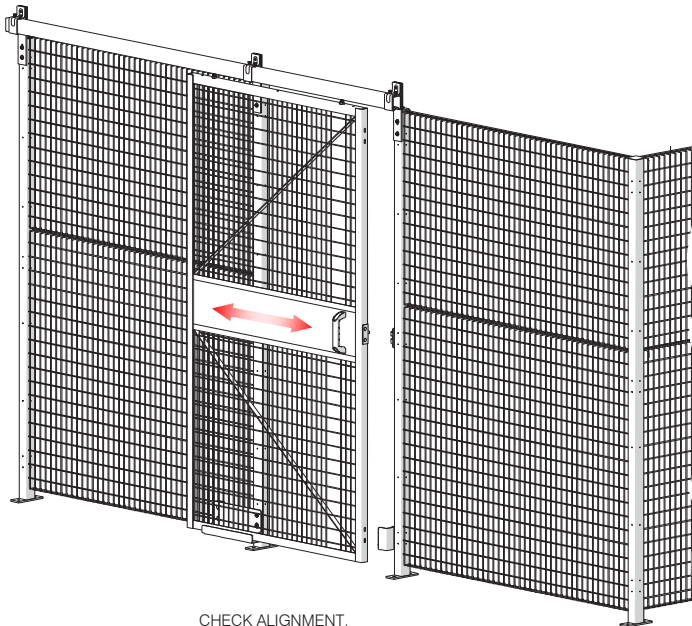


# 12

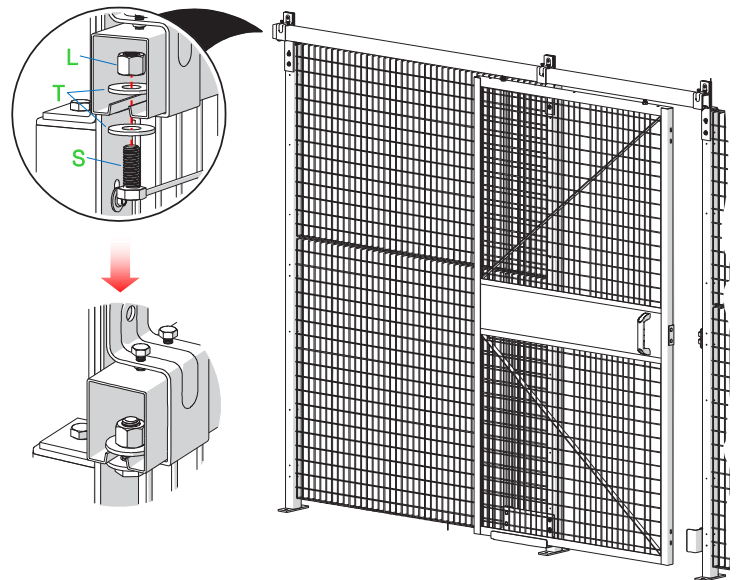


# 13


## CYLINDER LOCK INSTALLATION (STEPS 13 THRU 16 ARE FOR CYLINDER LOCK INSTALLATION ONLY)

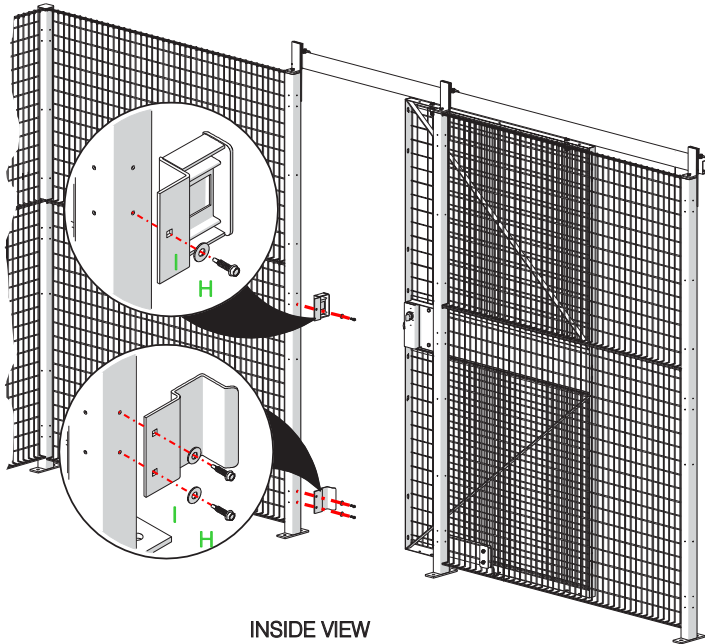


# 14

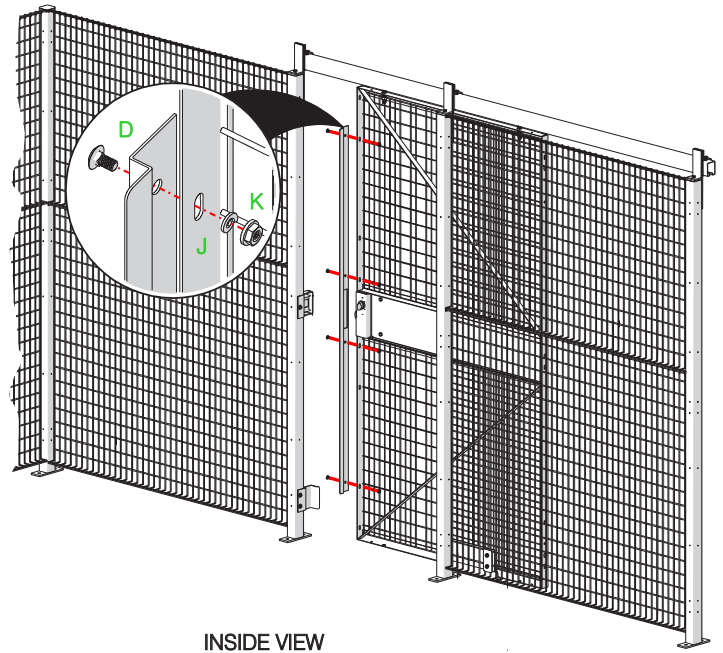

# 15

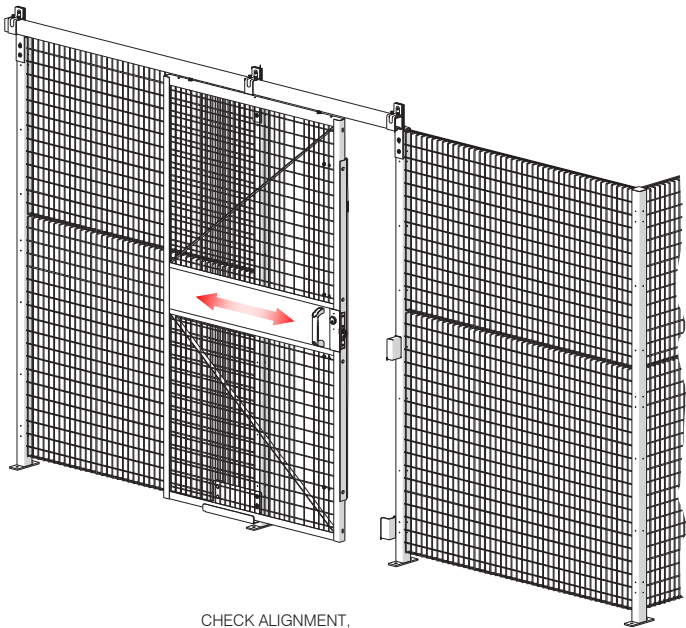


# 16

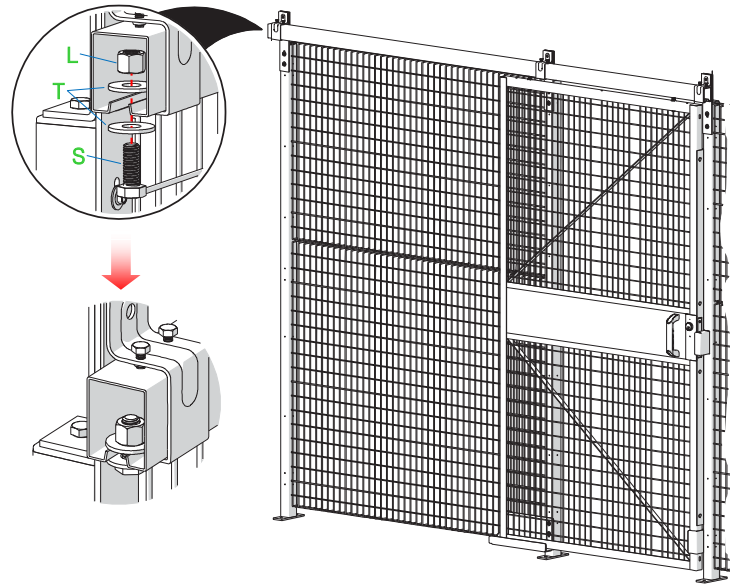


# 17

## SNAP LOCK INSTALLATION (STEPS 17 THRU 20 ARE FOR SNAP LOCK INSTALLATION ONLY)

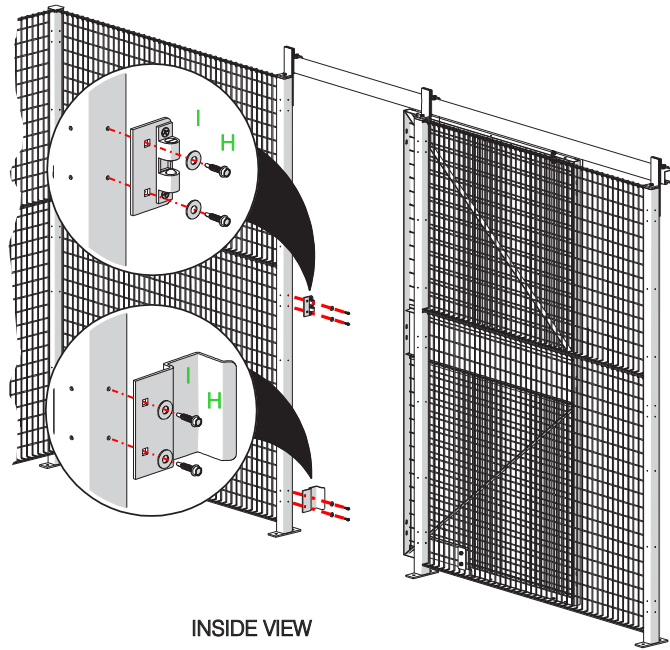


INSIDE VIEW

# 18

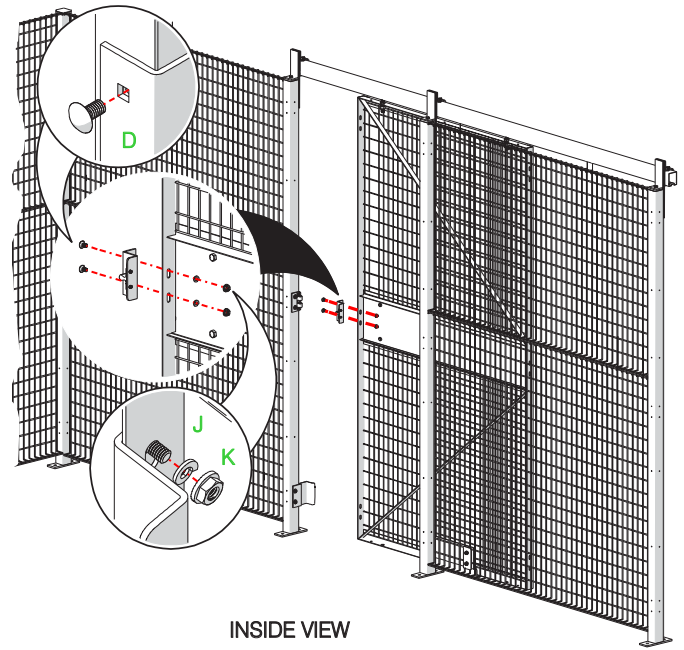

INSIDE VIEW

# 19

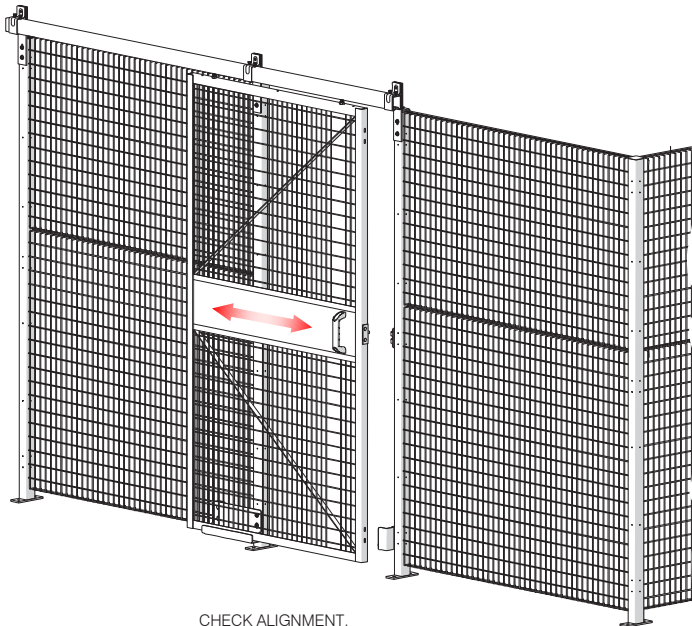

CHECK ALIGNMENT,  
ADJUST DOOR AS NECESSARY

# 20

