



TOOLS NEEDED

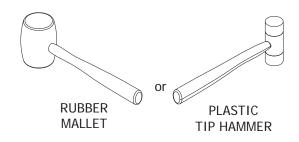



QUICK GRIP CLAMPS

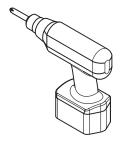

POWER DRILL












INCLUDED HARDWARE





#1/4-20 X 3/4" PAN HEAD PHILLIPS MACHINE SCREW (4) PSCR0091









N8 x .375 TEK SCREW (20) PSCR0016







#10-24 X 5/8"
PAN HEAD PHILLIPS
MACHINE SCREW (4)
PSCR0041






10-24 NYLON LOCK NUT(4) PNUT0055

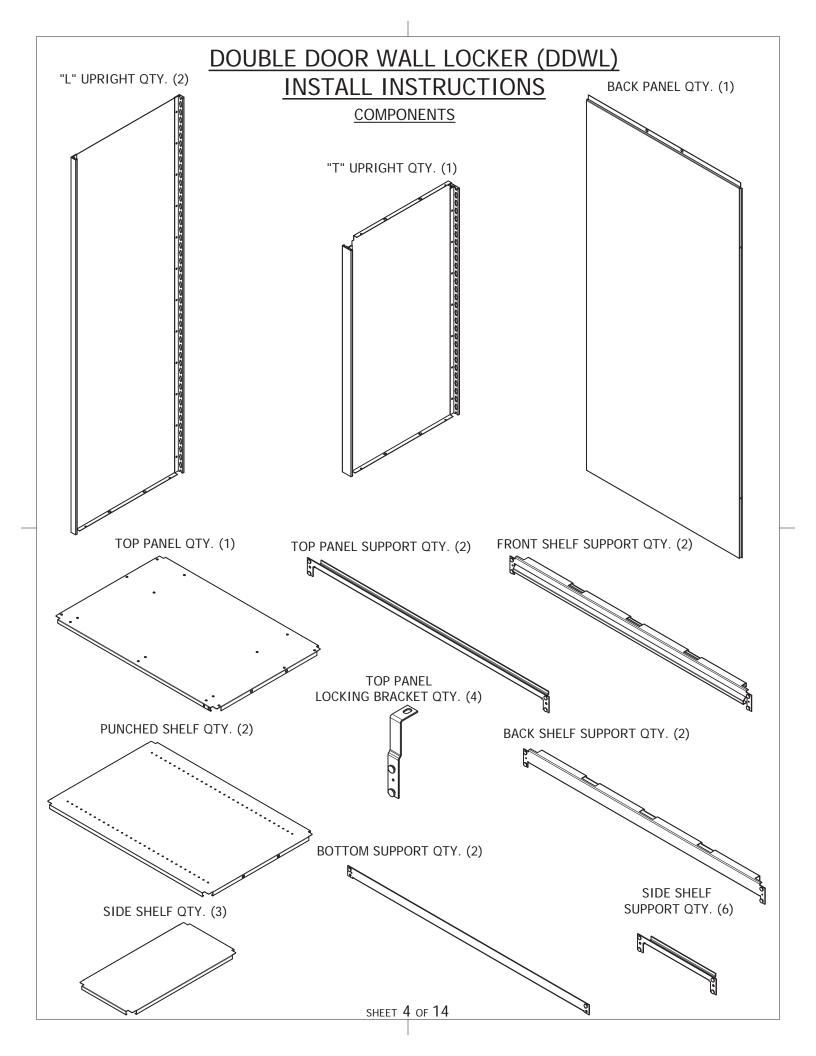

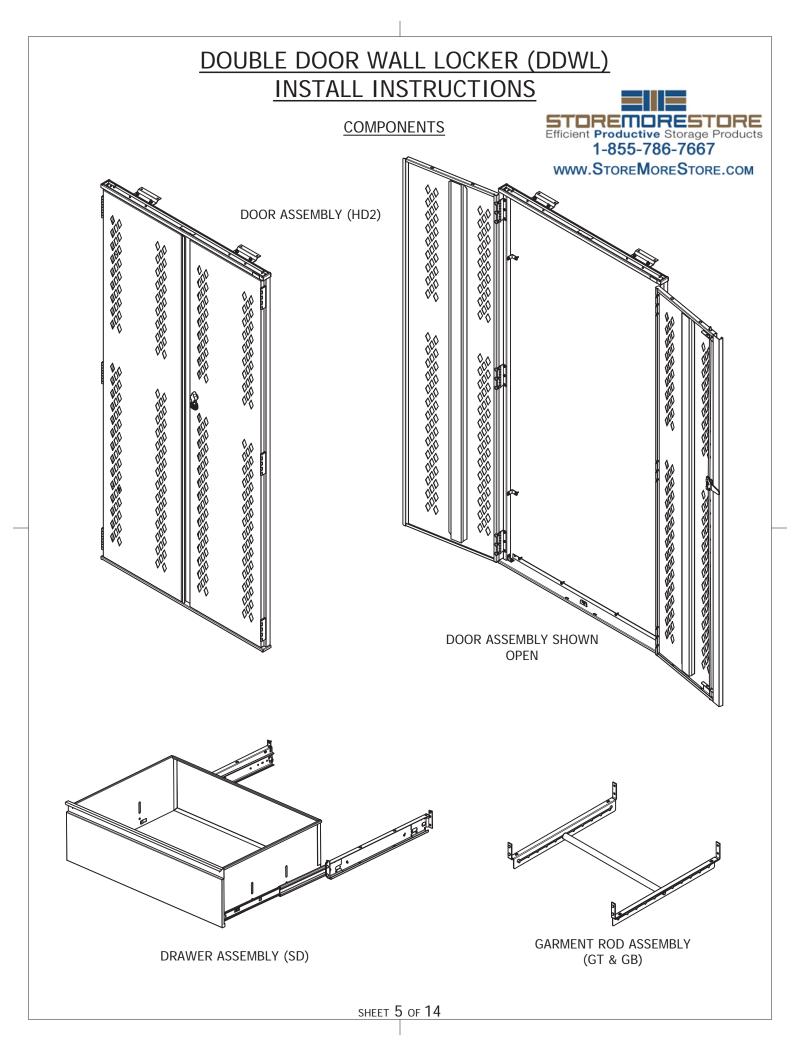


STEP:1

IF NOT ALREADY INSTALLED, INSTALL THE LEVELING GLIDE KNOCK-IN MOUNTS (QTY. 4) IN THE BOTTOM (END WITH FLANGE) OF THE "L" UPRIGHTS AS SHOWN IN FIGURE A, DETAIL B. INSTALL LEVELING GLIDES IN KNOCK-IN MOUNTS LEAVING 1/8" CLEARENCE BETWEEN LEVELING MOUNT, AND INSIDE SURFACE (HEX SHAPE) OF LEVELING GLIDE.

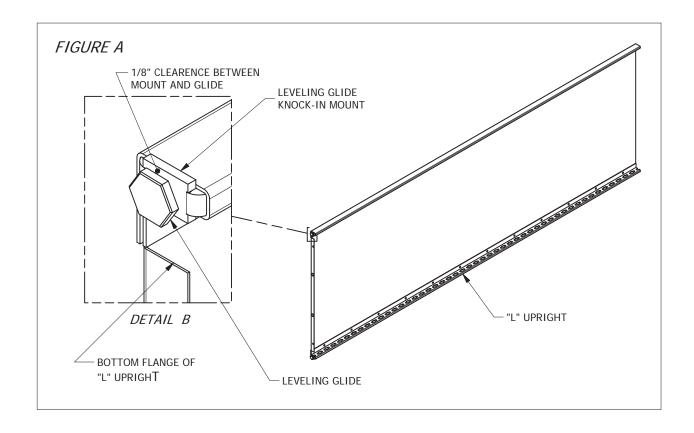


STEP:2

ASSEMBLE THE FRONT OF THE LOCKER USING QTY. (2) "L" UPRIGHT ASSEMBLIES, AND QTY. (3) SUPPORTS IN POSITIONS AS SHOWN IN FIGURE C. INSTALL POSITION RETAINING SCREWS (#8 X .375 TEK SCREWS) QTY. (2) PER, IN BOTTOM, AND QTY (2) FRONT SHELF SUPPORTS, AS SHOWN IN DETAILS D AND E.

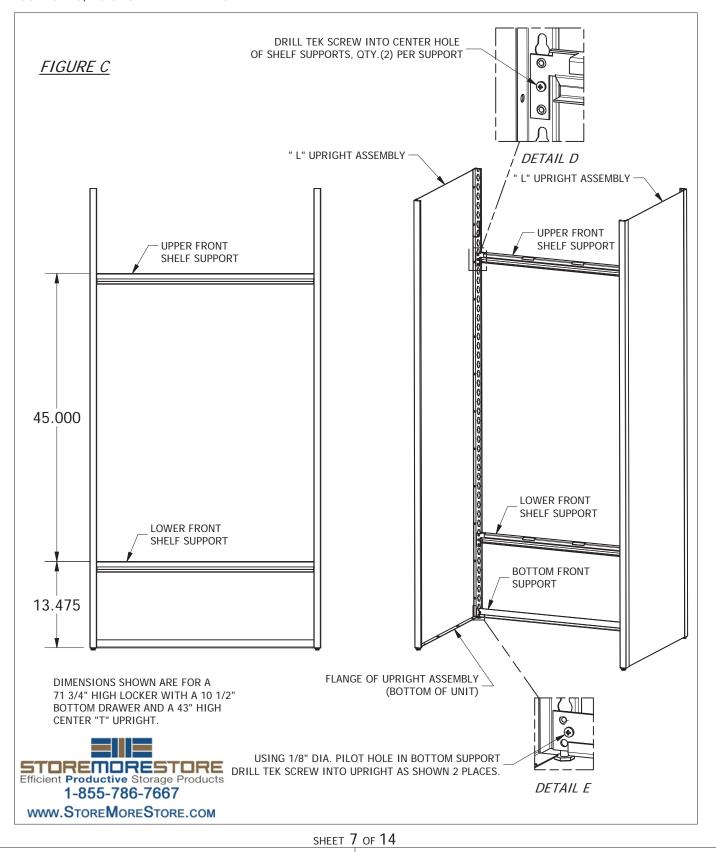


STEP:3

WITH LOCKER LAYING ON ITS BACK, POSITION THE REAR BACK PANEL SO AS THE FLANGES ARE AGAINST THE KEYHOLE FACE OF THE UPRIGHT AS SHOWN IN FIGURE F, DETAIL G AND H. PANEL SHOULD BE JUST SHORT OF FLUSH WITH BOTTOM AND TOP OF UPRIGHT ASSEMBLIES.

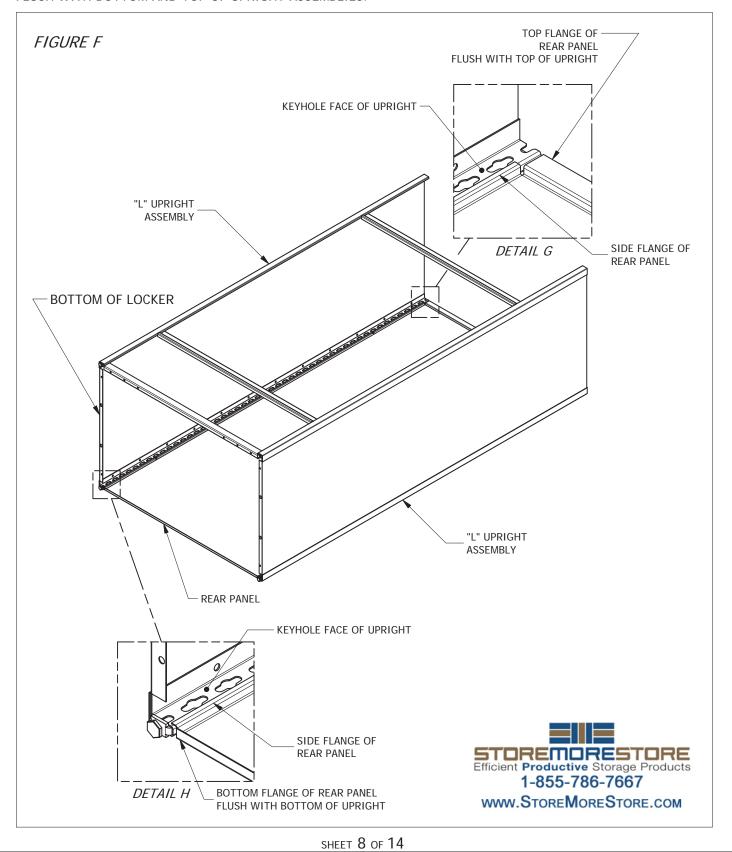


STEP:4


INSTALL REAR SHELF SUPPORTS SANDWICHING THE REAR PANEL BETWEEN THE SHELF SUPPORTS AND KEYHOLE SLOT FACE OF THE UPRIGHT. INSTALL THE POSITION LOCK SCREWS IN THE SUPPORTS SAME AS STEP 2, MAKING SURE TO KEEP THE BACK PANEL FLUSH WITH THE TOP AND BOTTOM OF THE "L" UPRIGHTS AS SHOWN IN FIGURE J, DETAILS K,L AND M.

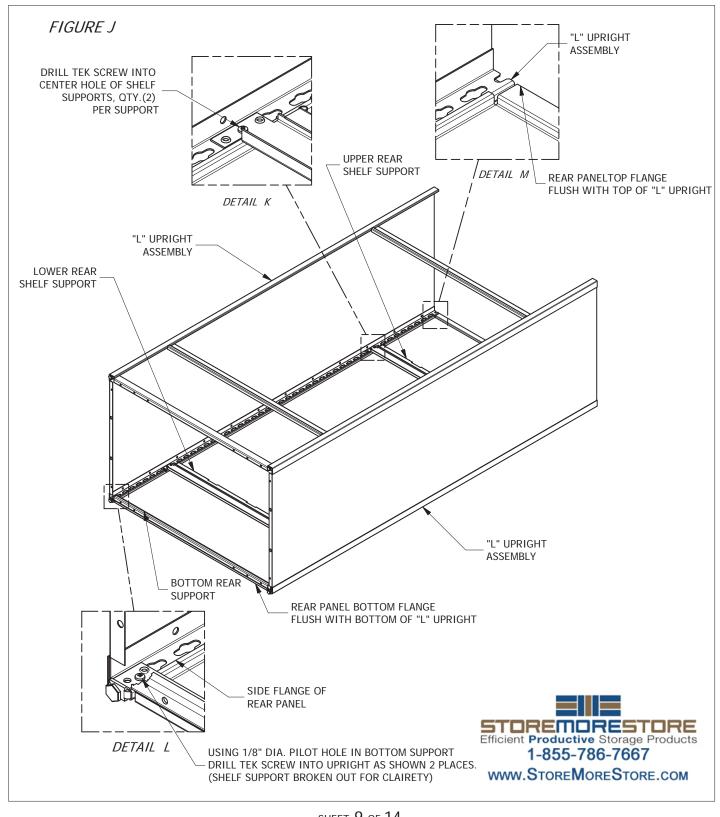



STEP:5


STAND UNIT UPRIGHT, INSTALL DRAWER SUSPENSION MOUNTING (LEFT AND RIGHT) AS SHOWN IN FIGURE N, DETAIL O. REFER TO 4POST DRAWER (SD) INSTALLATION INSTRUCTIONS, STEPS 1 THRU 3.

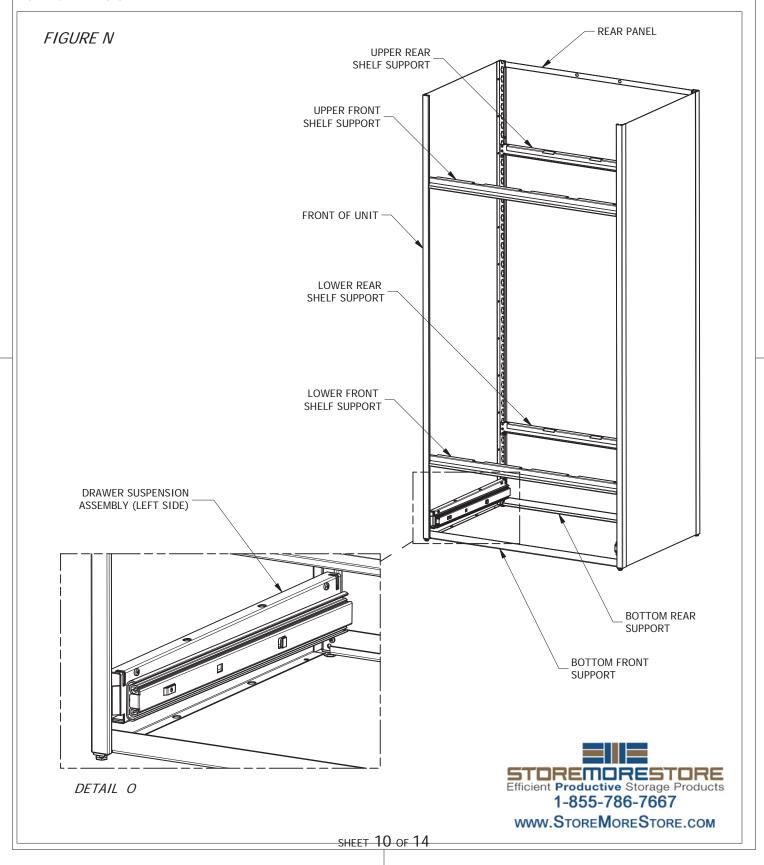

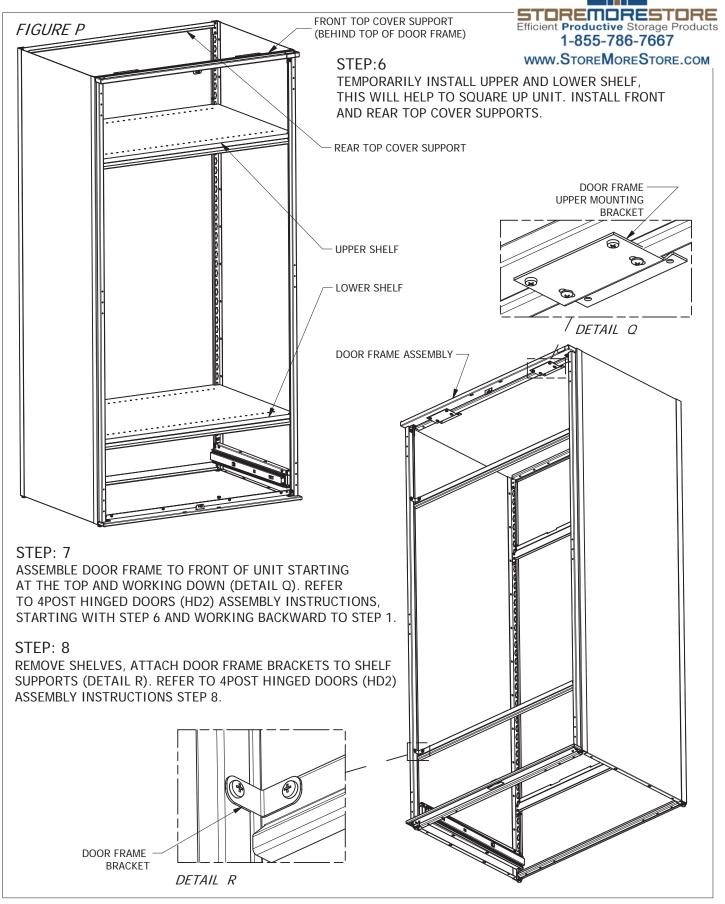

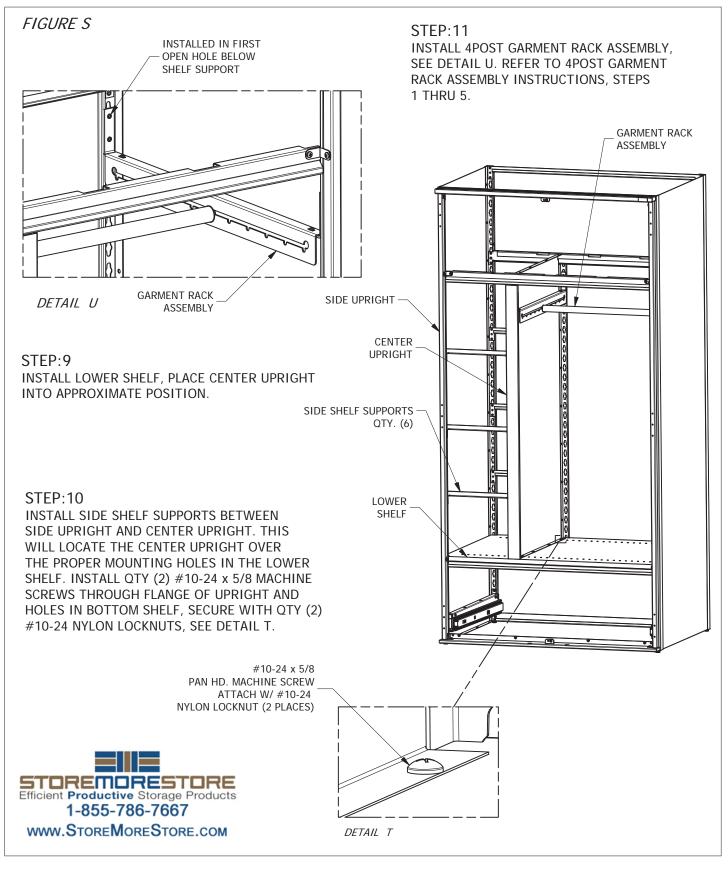

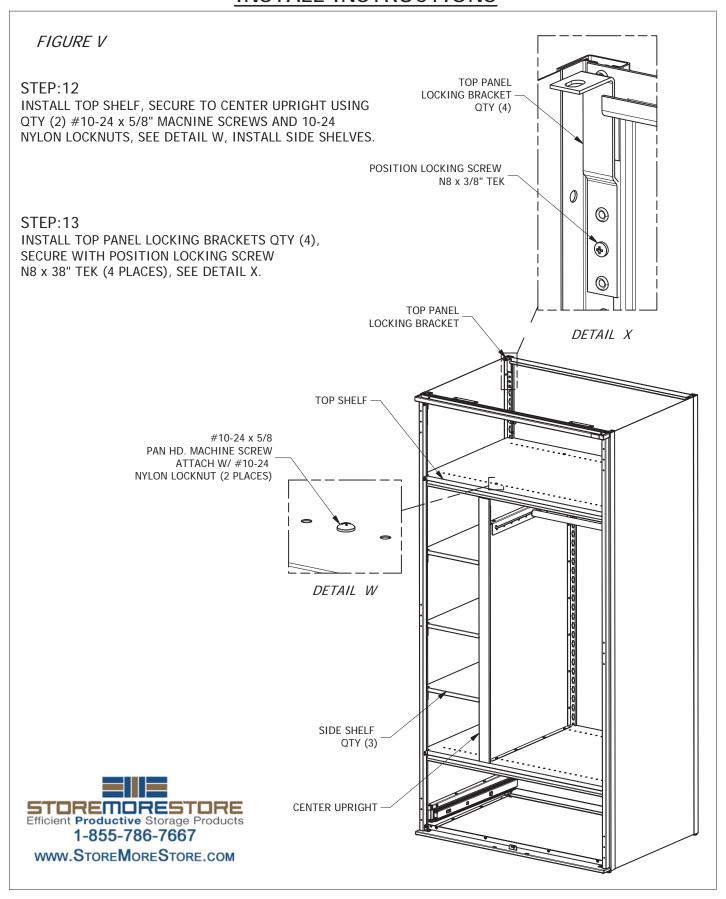

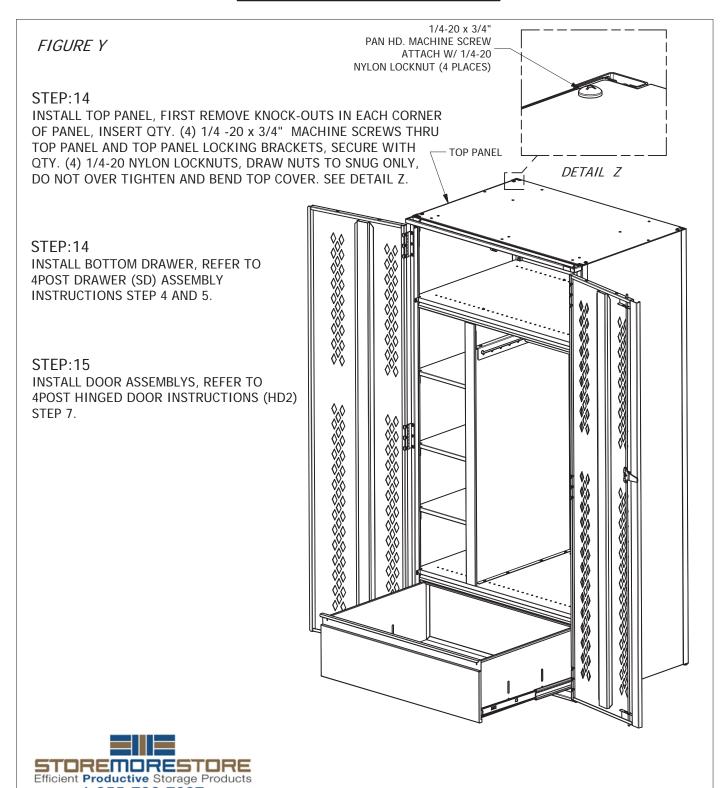

1-855-786-7667 www.StoreMoreStore.com